

IUH-F190-V1-
IUT-F190-R4-V1*

UHF read/write head for
IDENTControl

Manual



IDENTControl

With regard to the supply of products, the current issue of the following document is applicable: The General Terms of Delivery for Products and Services of the Electrical Industry, published by the Central Association of the Electrical Industry (Zentralverband Elektrotechnik und Elektroindustrie (ZVEI) e.V.) in its most recent version as well as the supplementary clause: "Expanded reservation of proprietorship"

Worldwide

Pepperl+Fuchs Group
Lilienthalstr. 200
68307 Mannheim
Germany
Phone: +49 621 776 - 0
E-mail: info@de.pepperl-fuchs.com

North American Headquarters

Pepperl+Fuchs Inc.
1600 Enterprise Parkway
Twinsburg, Ohio 44087
USA
Phone: +1 330 425-3555
E-mail: sales@us.pepperl-fuchs.com

Asia Headquarters

Pepperl+Fuchs Pte. Ltd.
P+F Building
18 Ayer Rajah Crescent
Singapore 139942
Phone: +65 6779-9091
E-mail: sales@sg.pepperl-fuchs.com
<https://www.pepperl-fuchs.com>

1	Introduction.....	6
1.1	Content of this Document.....	6
1.2	Target Group, Personnel	6
1.3	Symbols Used	7
2	Certificates and approvals.....	8
2.1	Declaration of Conformity (RE Directive 2014/53/EU)	8
2.2	FCC-Information.....	8
2.3	IC-Information	9
2.4	UL Information	9
2.5	Approval Thailand.....	10
2.6	Additional country-specific approvals	10
3	Product Description	11
3.1	RFID Frequency Bands	11
3.2	UHF general.....	11
3.2.1	Advantages of UHF.....	11
3.2.2	Applications for UHF systems	11
3.2.3	Memory Structure in acc. with EPC Gen 2 (ISO/IEC 18000-63)	12
3.2.4	Elektronic Product Code (EPC).....	14
3.2.5	Influence of various materials on the sensing range.....	14
3.2.6	Dense Reader Mode (DRM)	15
3.2.7	Frequency Hopping Spread Spectrum.....	16
3.2.7.1	China	16
3.2.7.2	United States	16
3.2.8	Relevant Standards for UHF	16

3.3	Countries of Use	17
3.3.1	European Union	17
3.3.2	Argentina.....	17
3.3.3	Australia	18
3.3.4	Brazil	18
3.3.5	Canada	18
3.3.6	China.....	18
3.3.7	Hong Kong	19
3.3.8	India	19
3.3.9	Indonesia	19
3.3.10	Japan	20
3.3.11	Colombia.....	20
3.3.12	Malaysia	20
3.3.13	Morocco	20
3.3.14	Mexico.....	21
3.3.15	New Zealand	21
3.3.16	Russia	21
3.3.17	Singapore.....	22
3.3.18	South Korea	22
3.3.19	Thailand	23
3.3.20	United States of America.....	23
3.3.21	Vietnam.....	23
3.4	General Functions and Features	24
3.5	Technical Data	25
3.6	Indicators and Operating Elements	25
3.7	Connection	25
3.8	Scope of Delivery	27
3.9	Accessories	27
3.9.1	IDENTControl	27
3.9.2	Read/Write Tags.....	28
3.9.3	Connection cable for R/W heads and trigger sensors	28
3.9.4	Cable connectors for the power supply	29
3.9.5	Mounting set	29
4	Installation	30
4.1	Storage and Transportation	30
4.2	Unpacking.....	30

4.3	Mounting	30
4.3.1	Room Orientation.....	32
4.3.2	Minimum Distances	32
4.3.3	Polarization	33
4.4	Connection	33
4.5	EMC Concept	34
5	Commissioning	35
5.1	Definitions	35
5.1.1	Display.....	35
5.1.2	Legend.....	35
5.2	Sensor Settings	36
5.3	Operation via the Command Interface	36
6	Operation	39
6.1	General	39
6.2	Basic Command Process	39
6.3	Command Overview	40
6.4	Read/Write Commands	41
6.5	Filter Commands	45
6.6	Configuration Commands	48
6.6.1	Read and Write Parameters	49
6.6.2	Parameter	50
6.7	Read/Write Head IUT-F190-R4-V1-* with Integrated RS-485 Interface	59
6.7.1	Single-drop mode	60
6.7.2	Multi-drop mode.....	61
6.8	Error/Status Messages	63
7	Service and Maintenance	64
8	Troubleshooting	65
9	Appendix	66
9.1	Dimensions	66
9.2	ASCII table	66
9.3	Detection range	67

1 Introduction

1.1 Content of this Document

This document contains information required to use the product in the relevant phases of the product life cycle. This may include information on the following:

- Product identification
- Delivery, transport, and storage
- Mounting and installation
- Commissioning and operation
- Maintenance and repair
- Troubleshooting
- Dismounting
- Disposal



Note

For full information on the product, refer to the further documentation on the Internet at www.pepperl-fuchs.com.

The documentation comprises the following parts:

- This document
- Datasheet

In addition, the documentation may comprise the following parts, if applicable:

- EU-type examination certificate
- EU declaration of conformity
- Attestation of conformity
- Certificates
- Control drawings
- Instruction manual
- Other documents

1.2 Target Group, Personnel

Responsibility for planning, assembly, commissioning, operation, maintenance, and dismounting lies with the plant operator.

Only appropriately trained and qualified personnel may carry out mounting, installation, commissioning, operation, maintenance, and dismounting of the product. The personnel must have read and understood the instruction manual and the further documentation.

Prior to using the product make yourself familiar with it. Read the document carefully.

1.3 Symbols Used

This document contains symbols for the identification of warning messages and of informative messages.

Warning Messages

You will find warning messages, whenever dangers may arise from your actions. It is mandatory that you observe these warning messages for your personal safety and in order to avoid property damage.

Depending on the risk level, the warning messages are displayed in descending order as follows:



Danger!

This symbol indicates an imminent danger.

Non-observance will result in personal injury or death.



Warning!

This symbol indicates a possible fault or danger.

Non-observance may cause personal injury or serious property damage.



Caution!

This symbol indicates a possible fault.

Non-observance could interrupt the device and any connected systems and plants, or result in their complete failure.

Informative Symbols



Note

This symbol brings important information to your attention.



Action

This symbol indicates a paragraph with instructions. You are prompted to perform an action or a sequence of actions.

2 Certificates and approvals

2.1 Declaration of Conformity (RE Directive 2014/53/EU)

This product was developed and manufactured under observance of the applicable European standards and guidelines.

**Note**

A Declaration of Conformity can be requested from the manufacturer or downloaded from www.pepperl-fuchs.com.

The product manufacturer, Pepperl+Fuchs AG, 68307 Mannheim, has a certified quality assurance system that conforms to ISO 9001.



2.2 FCC-Information

FCC ID: IREIUHF190V1B

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Attention:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note:

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Notice

To comply with FCC part 15 rules in the United States, the system must be professionally installed to ensure compliance with the Part 15 certification. It is the responsibility of the operator and professional installer to ensure that only certified systems are deployed in the United States. The use of the system in any other combination (such as co-located antennas transmitting the same information) is expressly forbidden.

FCC Exposure Information

To comply with FCC RF exposure compliance requirements, the antennas used for this transmitter must be installed to provide a separation distance of at least 30 cm from all persons and must not be co-located or operated in conjunction with any other antenna or transmitter.

2.3**IC-Information**

This device complies with Industry Canada licence-exempt RSS standard(s) and with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause interference, and
2. this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. l'appareil ne doit pas produire de brouillage, et
2. l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

IC Exposure Information

To comply with IC RF exposure compliance requirements, the antennas used for this transmitter must be installed to provide a separation distance of at least 30 cm from all persons and must not be co-located or operated in conjunction with any other antenna or transmitter.

2.4**UL Information****Technical Data and Environmental Conditions**

This device is for indoor use only.

This device may be operated in altitudes up to 2000 m.

The ambient temperature range is from -20 °C to +70 °C for operation with non-transmission periods, or -20 °C to +60 °C for continuous transmission mode. The pollution degree is 2.

The maximum relative humidity is 80 % for temperatures up to 31 °C, decreasing linearly to 50 % relative humidity at 40 °C.

Nominal power supply voltage is 24 V_{DC}, voltage range is 20 ... 30 V_{DC}. Supply must be PELV (Protective Extra Low Voltage). The overvoltage category II is applied.

This is the case if Pepperl+Fuchs IDENTControl control interface is used.

Protection class IP67 is not included in the UL approval. The protection class is tested by Pepperl+Fuchs AG.

The external circuits intended to be connected to this unit must be galvanically isolated from the mains supply or hazardous live voltage by reinforced or double insulation and fall within the limits specified in clauses 6.3 and 9.4 of UL 61010-1.

2.5 Approval Thailand



Device type: IUH-F190-V1-FR2-12

Part number: 309845

1. เครื่องโทรคมนาคมและอุปกรณ์นี้
มีความสอดคล้องตามมาตรฐานหรือข้อกำหนดทางเทคนิคของ กสทช.
(This telecommunication equipment conforms to the standard or technical requirements of NBTC.)
2. เครื่องวิทยุคมนาคมนี้มีระดับการแผ่คลื่นแม่เหล็กไฟฟ้าสอดคล้องตามมาตรฐานความปลอดภัยต่อสุขภาพของมนุษย์จากการใช้เครื่องวิทยุคมนาคมที่คณะกรรมการกิจการโทร
(This radiocommunication equipment has the electromagnetic field strength in compliance with the Safety Standard for the Use of Radiocommunication Equipment on Human Health announced by the National Telecommunications Commission.)


2.6 Additional country-specific approvals

For all current approvals see the data sheet of your read / write head under www.pepperl-fuchs.com.

3 Product Description

3.1 RFID Frequency Bands

The following diagram shows the position of the different frequency bands used for RFID. The read/write heads described in this manual operate in the frequency range from 865 MHz ... 868 MHz and from 902 MHz ... 928 MHz, highlighted in color.

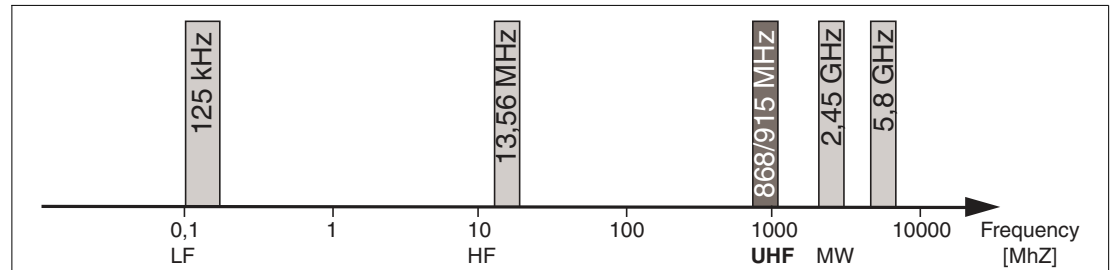

- 100 kHz ... 135 kHz: Low frequency LF
- 13.56 MHz: High frequency HF
- 865 MHz ... 868 MHz (Europe), 902 MHz ... 928 MHz (USA), 920 MHz ... 925 MHz (China): ultra-high frequency UHF
- 2.45 GHz and 5.8 GHz: Microwave MW

3.2 UHF general


3.2.1 Advantages of UHF

- Long detection range
- UHF tags are available as cheap and space-saving adhesive labels
- High transfer rates
- Tag is available with a large working memory (user memory)
- Bulk detection

3.2.2 Applications for UHF systems

- Identification in galvanic coating or painting systems used in automotive production,
- Identification feasible over greater distances than with LF and HF systems,
- Identification of automotive superstructures in automotive production,
- Pallet identification and measurement of goods movements in the logistics sector, and
- Access control at unloading stations with HGV identification.

3.2.3 Memory Structure of a Tag in Accordance with EPC Gen 2 (ISO/IEC 18000-63)

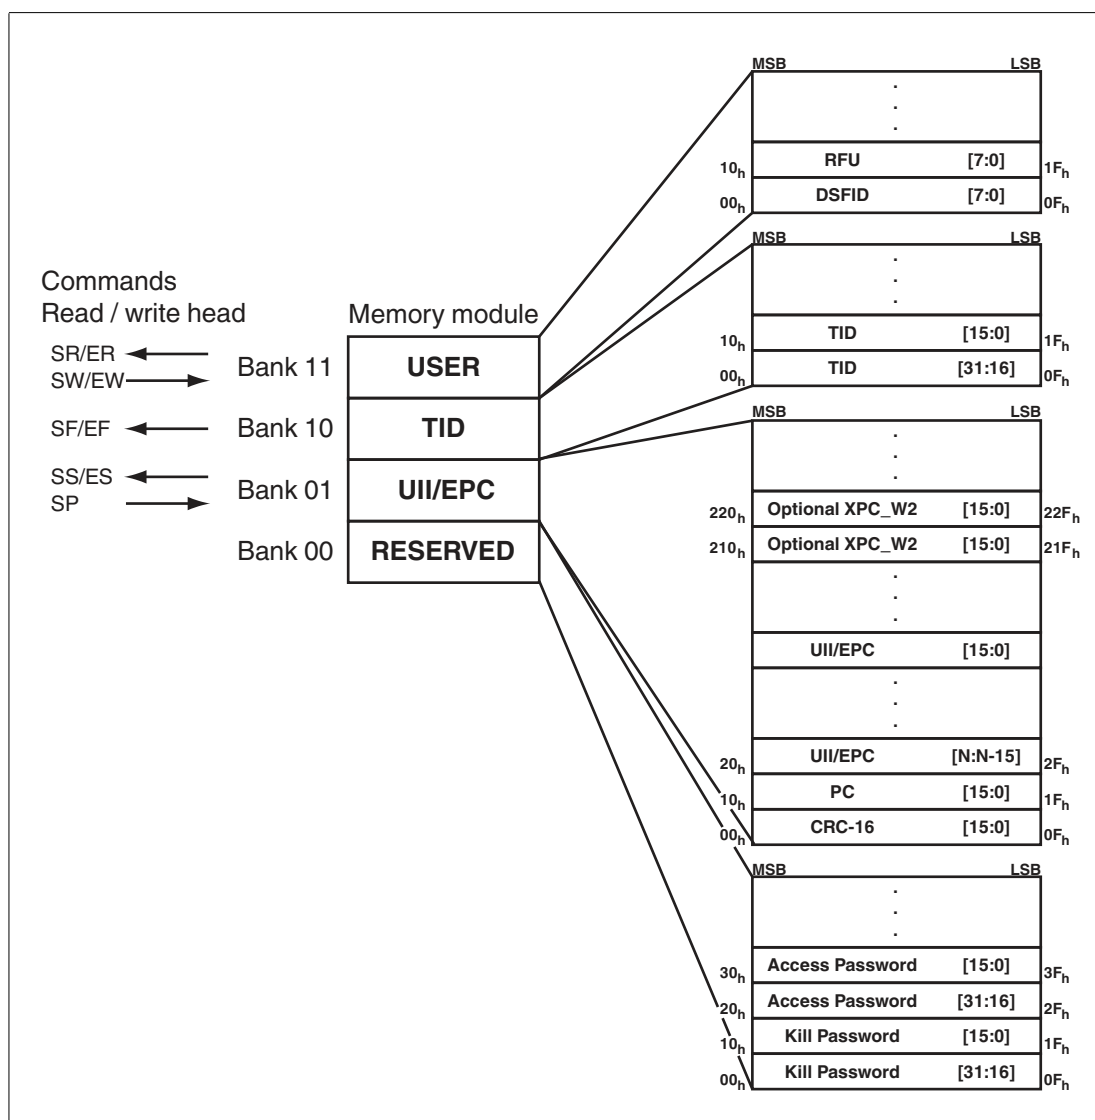

The memory module of an EPC Gen 2 (ISO/IEC 18000-63) tag is split into four segments. The main contents of these segments are:

Segment	Function	Length
Bank 00 (00 _{bin} = 0 _{dec})	Password management	Depending on the tag type, /column "Bank 00"
Bank 01 (01 _{bin} = 1 _{dec})	Unique Item Identifier (UII) Electronic Product Code (EPC)	Depending on the tag type, /column "UII/EPC"
Bank 10 (10 _{bin} = 2 _{dec})	Tag ID (TID)	4 bytes (MDID, TMN) + 0, 4, or 8 bytes
Bank 11 (11 _{bin} = 3 _{dec})	User memory	Depending on the tag type, /column "User Data"

Bank 00: Password Management

The segment **Bank 00** contains the password management information, comprising the access password and the kill password. The read/write head manages the kill password with the standard read/write commands SW and SR. The access password is not supported. See "**Single Read Words SR**" on page 43, see "**Single Write Words SW**" on page 44, and see "**Memory Module for Tag Accesses to the "Memory Bank" MB**" on page 52.

Bank 01: UII/EPC

In addition to the Unique Item Identifier (UII), the segment **Bank 01** contains a calculated checksum CRC (Cyclic Redundancy Check) for verifying data on the tag and the protocol control (PC) area. The PC area contains:

- The length of the UII
- The Application Family Identifier (AFI) box
- A bit switch that shows whether the UII contains an EPC sequence of numbers in accordance with ISO (see chapter 3.2.4)
- A bit switch that shows whether data is stored in segment bank 11 (if present)

The data is addressed via the following commands: single read special read-only code (SS), single write special read-only code (SP), and enhanced read special read-only code (ES). See "**Single Read Special Read-Only Code SS**" on page 42, see "**Single Write Special Read-Only Code SP**" on page 42, and see "**Enhanced Read Special Read-Only Code ES**" on page 42.

Bank 10: TID

The segment **Bank 10** contains the tag identifier (TID), consisting of the part number and optional serial number of the tag. This data is permanently stored without being changed. The first byte denotes the class of the tag with E0_{hex}, E2_{hex}, or E3_{hex}. The rest of the TID depends on the class, and can be derived from standard ISO/IEC 18000-63.

Example:

All tags with the class EPC Gen 2 (ISO/IEC 18000-63) are marked with E2_{hex}. The TID is comprised as follows:

- 4 bytes: part number of the tag
 - 1 byte: identifier
 - 12 bits: tag mask designer identifier (MDID)
 - 12 bits: tag model number (TMN), defined by the manufacturer:
- 4 or 8 bytes: serial number of the tag

Depending on the manufacturer, the serial numbers do not have to be unique or may even be omitted.

The data in segment **Bank 10** can be output via the single read read-only code (SF) and enhanced read read-only code (EF) commands. (see "**Single Read Read-Only Code SF**" on page 41 and see "**Enhanced Read Read-Only Code EF**" on page 41)

Bank 11: User Memory

Segment **Bank 11** contains an area to which the user has free access. This size of this area depends on the chip type, or the area may not be present.

The data in segment **Bank 11** is addressed via the single read words (SR), single write words (SW), enhanced read words (ER), and enhanced write words (EW) commands. (see "**Single Read Words SR**" on page 43, see "**Single Write Words SW**" on page 44, see "**Enhanced Read Words ER**" on page 44, and see "**Enhanced Write Words EW**" on page 44)

3.2.4 Elektronik Product Code (EPC)

The electronic product code is a unique identifier in the form of a sequence of numbers. The number sequence has a set structure and a length of 64 bits, 80 bits, 96 bits, or longer (depending on the EPC Ident number used). This number sequence is saved to the RFID tag, offering worldwide unique identification of the tagged object.

The system of Electronic Product Codes (EPC) was defined by GS1/EPCglobal for use in inventory management. Tags with memory banks for EPC codes must be programmed by the user. The memory of new tags must not contain any valid EPC codes. The EPC numbers are managed and assigned by GS1. To obtain EPC numbers, please contact the GS1 branch in your country (<http://www.gs1.com/contact>).


The electronic product code is defined by EPCglobal with at present 13 different encoding schemes. SGTIN-96 (serialized global trade item number) is given here as an example of a frequently used encoding scheme. SGTIN-96 has a defined format, and is structured as follows:

1. **Header:** The header specifies the EPC standard used, and denotes the number sequence.
2. **Filter value:** Denotes the unit of the product, for example, end product, additional packaging, pallet.
3. **Partition:** Denotes the point at which the following company prefix ends and the object data begins.
4. **Company Prefix:** Assigned sequence of numbers that identifies the producer.
5. **Object class:** Sequence of numbers that describes the object, e.g., item number.
The company prefix and the object class are each of variable length, but together are always 44 bits long.
6. **Serial number:** Sequence of numbers that identifies the item, e.g., the sequential serial number of the item.

	Header	Filter value	Partition	Company Prefix	Object class	Serial number
Length	8 Bit	3 Bit	3 Bit	20 - 40 Bit	4 - 24 Bit	38 Bit
Value	48 _{dez}	0 _{dez}	5 _{dez}	4050143 _{dez}	124 _{dez}	203886 _{dez}

3.2.5 Influence of various materials on the sensing range

In the UHF range, the nature of the surrounding area and the surface to which the transponder is secured have a serious influence on the range that the system can attain. The UHF transponder cannot be mounted on metal without requiring adaptations. Glass has a negative influence on the sensing range when used as a mounting surface. If a UHF transponder is mounted on damp material, the sensing range is much poorer than the range of a transponder mounted on dry material. The mounting surface often affects the read range much more than the material between the transponder and the read/write head. The graph shows the effect of different materials on the sensing range.

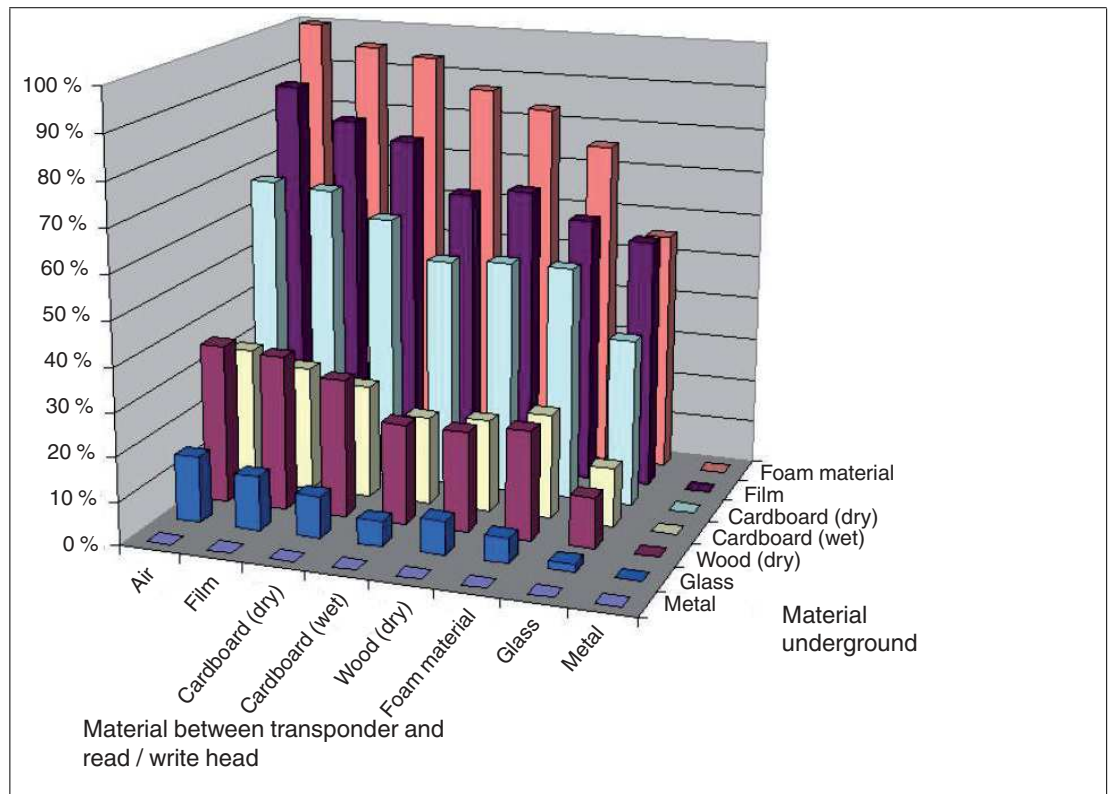

3.2.6 Dense Reader Mode (DRM)

Europe

A special operating mode for read/write tags in accordance with the specification EPC Gen 2 (ISO/IEC 18000-63) allows several read/write heads to be operated close to each other simultaneously without interference.

In accordance with EN 302208, the read/write head uses only channels 4, 7, 10, and 13 in this mode for transmission (read/write head → read/write tag communication path). The transmission power is a maximum of $2 W_{ERP}$ in accordance with EN 302208.

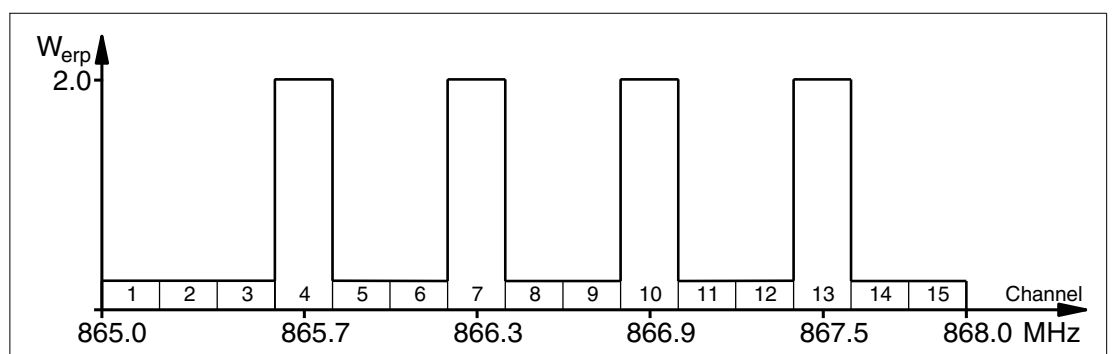


Figure 3.1

The response from the read/write tag appears via the frequency offset, which is achieved by the modulation used in this mode on the two adjacent channels. Due to the high level difference between the transmission channels and the response channels, this technology offers major benefits for reusing frequencies.

3.2.7 Frequency Hopping Spread Spectrum

With FHSS (Frequency Hopping Spread Spectrum), the information to be transmitted is distributed successively through multiple channels. Only one frequency channel is used at any one time. This results in a larger bandwidth for the entire signal, in spite of the fact that each channel has a smaller bandwidth. In this section the channel assignment for China and the USA is shown graphically. For both assignments, different parameters apply, such as channel number and channel bandwidth. Different parameterizations apply in other countries.

3.2.7.1 China

In China, the frequency range 920 MHz ... 925 MHz is available for UHF-RFID read/write heads. The range is split into channels, each with a bandwidth of 250 kHz. A maximum of 2 W_{ERP} is permitted on 16 of the available channels. The transmission power is indicated in W_{ERP} . FHSS is used with a maximum retention time of two seconds. The UHF RFID read/write head for China uses channel 2 to 17.

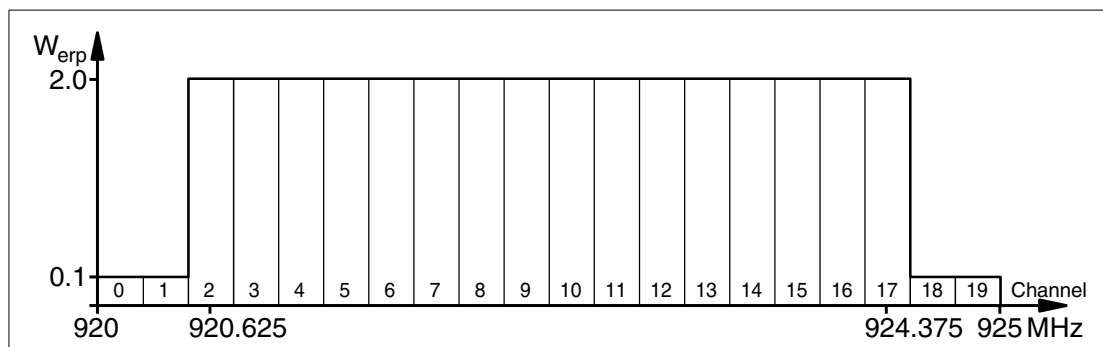


Figure 3.2

3.2.7.2 United States

The ISM band from 902 MHz ... 928 MHz is available in the USA. The band is split into 50 channels, each with a 500 kHz bandwidth. FHSS with a maximum retention time of 0.4 seconds is used. All channels must be used. Channel restriction is not permitted.

In contrast to the read/write heads for Europe and China, the transmission power is indicated in W_{eirp} . A maximum of 4 W_{eirp} is permitted on all channels.

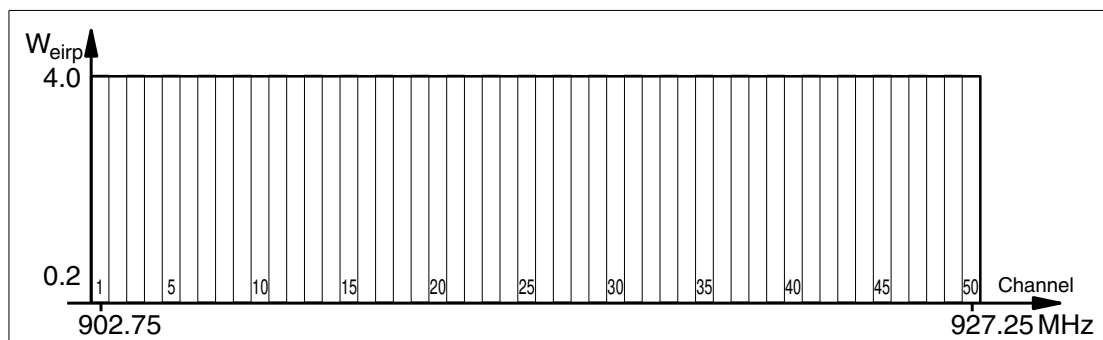


Figure 3.3

3.2.8 Relevant Standards for UHF

European radio standards: EN 300220 and EN 302208

Usage recommendations for RFID type labels, information about recycling, installation of readers and antennae: ISO/IEC TR 24729 parts 1-4

Installation and commissioning of UHF-RFID systems: ETSI TR 102436

Description of air interface: EPC Gen 2 (ISO/IEC 18000-63)

3.3 Countries of Use



Note

Transmission License

A country-specific transmission license is required to operate the read/write head. In the European Union, the manufacturer's declaration of conformity constitutes an adequate license. All currently valid transmission licenses can be found in the datasheet for the respective read/write head at www.pepperl-fuchs.com.



Note

Country Identifier

All read/write heads operate within their maximum frequency range with the appropriate settings for the relevant country. The country-specific settings are configured during production and cannot be subsequently modified.



Note

If you wish to use the read/write head in a country not included in this chapter, make sure the relevant values for the read/write head are consistent with the local conditions before use.

The frequency access procedure used is part of the country-specific settings.

Frequency Access Method

- In many countries, including the USA and China, a frequency hopping spread spectrum is used. See chapter 3.2.7. The number and position of the frequencies is fixed and cannot be changed by the user. All channels are used.
- A programmable frequency list is used in other countries, including the European Union, Singapore, Vietnam, and India. You can compile this frequency list from a specified set of channels. Four channels are specified in the European Union as appropriate for dense reader mode in accordance with EN 302208. See chapter 3.2.6. With this setting, you can configure one, multiple, or all four channels.

3.3.1 European Union

In the European Union, the use of RFID in the UHF range is regulated by EN 302208.

- UHF frequency range: 865 MHz ... 868 MHz
- Radiated power: 3 mW ... 1000 W_{ERP}; Default = 50 mW_{ERP}
- Channel bandwidth: 200 kHz
- Channel spacing: 600 kHz
- Frequency access method: programmable frequency list
- Number of predefined channels: 4
 Programmable channels: 4, 7, 10, 13
 Center frequencies: 865.7 MHz, 866.3 MHz, 866.9 MHz, 867.5 MHz
 Up to 4 channels can be parameterized and used in sequence.
 Default: dense reader mode with channel 4, 10, 7, 13. See chapter 3.2.6.

3.3.2 Argentina

The regulations for the UHF frequency range in Argentina are the same as the regulations for the UHF frequency range in the USA. See chapter 3.3.20.

3.3.3 Australia

In Australia, the use of RFID in the UHF range is regulated as follows:

- UHF frequency range: 920 MHz ... 926 MHz
- Radiated Power: 3 ... 1000 mW_{EIRP}; Default = 125 mW_{EIRP}
- Channel bandwidth: 500 kHz
- Channel spacing: 500 kHz
- Frequency access method: frequency hopping spread spectrum. See chapter 3.2.7.
- Number of channels: 12

Channels used: 1, 2, 3, ... 12

Center frequencies: 919.75 MHz + (M x 0.5) MHz

All 12 channels are always used.

3.3.4 Brazil

In Brazil, the use of RFID in the UHF range is regulated as follows:

- UHF frequency range: 915 MHz ... 928 MHz
- Radiated Power: 3 ... 1250 mW_{EIRP}; Default = 125 mW_{EIRP}
- Channel bandwidth: 250 kHz
- Channel spacing: 250 kHz
- Frequency access method: frequency hopping spread spectrum. See chapter 3.2.7.
- Number of channels: 52

Channels used: 1, 2, 3, ... 52

Center frequencies: 914.875 MHz + (M x 0.25) MHz

All 52 channels are always used.

3.3.5 Canada

The regulations for the UHF frequency range in Canada meet the requirements for the UHF frequency range in the U.S.. See chapter 3.3.20.

3.3.6 China

In China, the use of RFID in the UHF range is regulated by the provisions of the China Ministry of Industry and Information Technology (CMIIT).

- UHF frequency range: 920 MHz ... 925 MHz
- Radiated Power: 3 ... 800 mW_{ERP}; Default = 80 mW_{ERP}
- Channel bandwidth: 250 kHz
- Channel spacing: 250 kHz
- Frequency access method: frequency hopping spread spectrum (China). See chapter 3.2.7.
- Number of channels: 16

Channels used: 2, 3, 4, ... 17

Center frequencies: 920.125 MHz + (M x 0.25) MHz

All 16 channels are always used.

3.3.7 Hong Kong

The regulations for the UHF frequency range of 865 MHz to 868 MHz in Hong Kong are the same as the regulations for the UHF frequency range in the European Union. See chapter 3.3.1.

The regulations for the UHF frequency range of 920 MHz to 925 MHz in Hong Kong are the same as the regulations for the UHF frequency range in Thailand. See chapter 3.3.19.

3.3.8 India

In India, the use of RFID in the UHF range is regulated in accordance with EN 302208.

- UHF frequency range: 865 MHz ... 867 MHz
- Radiated Power: 3 ... 800 mW_{ERP}; Default = 50 mW_{ERP}
- Channel bandwidth: 200 kHz
- Channel spacing: 200 kHz
- Frequency access method: programmable frequency list
- Number of predefined channels: 10

Programmable channels: 1, 2, 3, ... 10

Center frequencies: 865.1 MHz, 865.3 MHz, 865.5 MHz, 865.7 MHz, 865.9 MHz, 866.1 MHz, 866.3 MHz, 866.5 MHz, 866.7 MHz, 866.9 MHz

Up to four channels can be parameterized simultaneously and used in sequence.

Default: dense reader mode on channel 1, 7, 4, 10. See chapter 3.2.6.

3.3.9 Indonesia

In Indonesia, the use of RFID in the UHF range is regulated as follows:

- UHF frequency range: 920 MHz ... 923 MHz
- Radiated Power: 3 ... 400 mW_{eirp}; Default = 125 mW_{eirp}
- Channel bandwidth: 500 kHz
- Channel spacing: 500 kHz
- Frequency access method: frequency hopping spread spectrum. See chapter 3.2.7.
- Number of channels: 6

Channels used: 1, 3, 5, 2, 4, 6

Center frequencies: 919.75 MHz + (M x 0.5) MHz

All 6 channels are always used.

3.3.10 Japan

In Japan, the use of RFID in the UHF range is regulated as follows:

- UHF frequency range: 916.7 MHz ... 920.5 MHz
- Radiated Power: 3 ... 125 mW_{EIRP}; Default = 125 mW_{EIRP}
- Channel bandwidth: 200 kHz
- Channel spacing: 1200 kHz
- Frequency access method: programmable frequency list.
- Number of predefined channels: 4

Programmable channels: 5, 11, 17, 23

Center frequencies: 916.8 MHz, 918.0 MHz, 919.2 MHz, 920.4 MHz

Up to four channels can be parameterized and used in sequence.

Default: dense reader mode on channel 5, 17, 11, 23. See chapter 3.2.6.

3.3.11 Colombia

The regulations for the UHF frequency range in Colombia are the same as the regulations for the UHF frequency range in the USA. See chapter 3.3.20.

3.3.12 Malaysia

In Malaysia, the use of RFID in the UHF range is regulated as follows:

- UHF frequency range: 919 MHz ... 923 MHz
- Radiated Power: 3 ... 800 mW_{ERP}; Default = 80 mW_{ERP}
- Channel bandwidth: 500 kHz
- Channel spacing: 500 kHz
- Frequency access method: frequency hopping spread spectrum. See chapter 3.2.7.
- Number of channels: 8

Channels used: 1, 2, 3, ... 8

Center frequencies: 918.75 MHz + (M x 0.5) MHz

All 8 channels are always used.

3.3.13 Morocco

In Morocco, the use of RFID in the UHF range is regulated in accordance with EN 302208:

- UHF frequency range: 867,6 ... 868 MHz
- Radiated Power: 3 ... 500 mW_{ERP}; Default = 50 mW_{ERP}
- Channel bandwidth: 200 kHz
- Channel spacing: 200 kHz
- Frequency access method: programmable frequency list.
- Number of predefined channels: 2

Programmable channels: 1, 2

Center frequencies: 867.7 MHz, 867.9 MHz

Up to two channels can be parameterized simultaneously and used in sequence.

Default: dense reader mode on channel 1, 2. See chapter 3.2.6.

3.3.14 Mexico

The regulations for the UHF frequency range in Mexico meet the requirements for the UHF frequency range in the U.S.. See chapter 3.3.20.

3.3.15 New Zealand

In New Zealand, the use of RFID in the UHF range is regulated as follows:

- UHF frequency range: 921.5 MHz ... 928 MHz
- Radiated Power: 3 ... 1250 mW_{EIRP}; Default = 125 mW_{EIRP}
- Channel bandwidth: 500 kHz
- Channel spacing: 500 kHz
- Frequency access method: frequency hopping spread spectrum. See chapter 3.2.7.
- Number of channels: 13

Channels used: 1, 2, 3, ... 13

Center frequencies: 921.25 MHz + (M x 0.5) MHz

All 13 channels are always used.

3.3.16 Russia

In Russia, the use of RFID in the UHF range is regulated in accordance with EN 302208:

- UHF frequency range: 866 MHz ... 867.6 MHz
- Radiated Power: 3 ... 800 mW_{ERP}; Default = 50 mW_{ERP}
- Channel bandwidth: 200 kHz
- Channel spacing: 200 kHz
- Frequency access method: programmable frequency list.
- Number of predefined channels: 8

Programmable channels: 1, 2, 3, ... 8

Center frequencies: 866.1 MHz, 866.3 MHz, 866.5 MHz, 866.7 MHz, 866.9 MHz, 867.1 MHz, 867.3 MHz, 867.5 MHz

Up to four channels can be parameterized simultaneously and used in sequence.

Default: dense reader mode on channel 1, 7, 4. See chapter 3.2.6.

3.3.17 Singapore

In Singapore, the use of RFID in the UHF range of 866 MHz to 868 MHz is regulated in accordance with EN 302208.

- UHF frequency range: 866 MHz ... 868 MHz
- Radiated Power: 3 ... 500 mW_{ERP}; Default = 50 mW_{ERP}
- Channel bandwidth: 200 kHz
- Channel spacing: 200 kHz
- Frequency access method: programmable frequency list
- Number of predefined channels: 10

Programmable channels: 1, 2, 3, ... 10

Center frequencies: 866.1 MHz, 866.3 MHz, 866.5 MHz, 866.7 MHz, 866.9 MHz, 867.1 MHz, 867.3 MHz, 867.5 MHz, 867.7 MHz, 867.9 MHz

Up to four channels can be parameterized simultaneously and used in sequence.

Default: dense reader mode on channel 1, 7, 4, 10. See chapter 3.2.6.

In Singapore, the use of RFID in the UHF range of 920 MHz to 925 MHz is regulated as follows.

- UHF wavelength: 920 MHz ... 925 MHz
- Radiated Power: 3 ... 500 mW_{ERP}; Default = 50 mW_{ERP}
- Channel bandwidth: 500 kHz
- Channel spacing: 500 kHz
- Frequency access method: frequency hopping spread spectrum. See chapter 3.2.7.
- Number of channels: 10

Channels used: 1, 2, 3, ... 10

Center frequencies: 919.75 MHz + (M x 0.5) MHz

All 10 channels are always used.

3.3.18 South Korea

In South Korea, the use of RFID in the UHF range is regulated as follows:

- UHF frequency range: 917.2 MHz ... 920.4 MHz
- Radiated Power: 3 ... 1250 mW_{EIRP}; Default = 125 mW_{EIRP}
- Channel bandwidth: 200 kHz
- Channel spacing: 600 kHz
- Frequency access method: frequency hopping spread spectrum. See chapter 3.2.7.
- Number of channels: 6

Channels used: 1, 4, 7, 10, 13, 16

Center frequencies: 917.1 MHz + (M x 0.20) MHz

All 6 channels are always used.

3.3.19 Thailand

In Thailand, the use of RFID in the UHF range is regulated as follows:

- UHF frequency range: 920 MHz ... 925 MHz
- Radiated Power: 3 ... 1250 mW_{EIRP}; Default = 125 mW_{EIRP}
- Channel bandwidth: 500 kHz
- Channel spacing: 500 kHz
- Frequency access method: frequency hopping spread spectrum. See chapter 3.2.7.
- Number of channels: 10

Channels used: 1, 2, 3, ... 10

Center frequencies: 919.75 MHz + (M x 0.5) MHz

All 10 channels are always used.

3.3.20 United States of America

In the USA, the use of RFID in the UHF range is regulated in accordance with the provisions set out by the Federal Communications Commission (FCC).

- UHF frequency range: 902 MHz ... 928 MHz
- Radiated Power: 3...1250 mW_{EIRP}; Default = 125 mW_{EIRP}
- Channel bandwidth: 500 kHz
- Channel spacing: 500 kHz
- Frequency access method: frequency hopping spread spectrum (USA). See chapter 3.2.7.
- Number of channels: 50

Channels used: 1, 2, 3, ... 50

Center frequencies: 902.25 MHz + (M x 0.5) MHz

All 50 channels are always used.

3.3.21 Vietnam

The regulations for the UHF frequency range of 866 MHz to 868 MHz in Vietnam are the same as the regulations for the UHF frequency range in Singapore. See chapter 3.3.17.

The regulations for the UHF frequency range of 920 MHz to 925 MHz in Vietnam are the same as the regulations for the UHF frequency range in Singapore. See chapter 3.3.17.

3.4 General Functions and Features



Figure 3.4

Functions

The read/write heads were developed for reading and writing passive read/write tags with a UHF range operating frequency.

Read/write head IUH-F190-V1-* can only be used together with an IDENTControl control interface from Pepperl+Fuchs.

Read/write heads IUT-F190-R4-V1-* do not require a control interface and can be connected by means of a point-to-point connection to a RS-485 serial interface.

Detection range

The detection range is typically 2 meters. Tags that comply with EPC Gen 2 (ISO/IEC 18000-63) are supported.

Maximum Frequency Range

Read/write heads IUH-F190-V1-FR1* and IUT-F190-R4-V1-FR1* can be operated in the frequency range from 865 MHz to 868 MHz. Read/write heads IUH-F190-V1-FR2* and IUT-F190-R4-V1-FR2* can be operated in the frequency range from 902 MHz to 928 MHz.

Features

The read/write head has the following features:

- 3 function indicator LEDs
- Industrial housing with a compact design
- Bulk detection
- Connects to IDENT via connector V1 (M12 x 1) *Control*
- Protected against electrostatic discharge

Integrated antenna

The read/write heads have a linear dual polarized antenna. The read/write heads can transmit and receive waves with horizontal and vertical polarization.

3.5 Technical Data

General Data

Operating frequency	Country-specific, see chapter 3.3
Light power	Country-specific, see chapter 3.3

Electrical Data

Current consumption	≤ 450 mA
Power consumption	≤ 9 W
Power supply	from IDENTControl ¹
Rated operating voltage	20 ... 30 V _{DC} , ripple 10 % SS, limited power source (EN60950) for IUT-F190*
Surge protection	Category 2

1. Only IUH-F190-*

Ambient Conditions

Ambient temperature	-20 ... 70 °C (-4 ... 158 °F) (operation with transmission pauses, adjustable) -20 ... 60 °C (-4 ... 140 °F) (continuous transmission operation)
Storage temperature	-40 ... 85 °C (-40 ... 185 °F)
Degree of pollution	2
Classification	Environmental condition A (controlled environment)

Mechanical Data

Degree of protection	IP67
Connection	Connector M12 x 1
Material Housing	PA 6
Material Mounting base	Aluminum, die cast
Weight	860 g

3.6 Indicators and Operating Elements

The read/write head has 3 LEDs, which are green/blue/yellow. The various indicators denote:

- Green LED: Power on
- Blue LED: Transmission mode
- Yellow LED: Read/write operation successful

3.7 Connection



Caution!

Cable specifications

The maximum permissible temperature of the connection cable must be at least +80 °C.

The minimum diameter of the connection cable must be 22 AWG or 0.34 mm².

IUH-F190-V1-*

The IUH-F190-V1-* read/write head is connected to the IDENTControl control interface via the M12 x 1 connector.

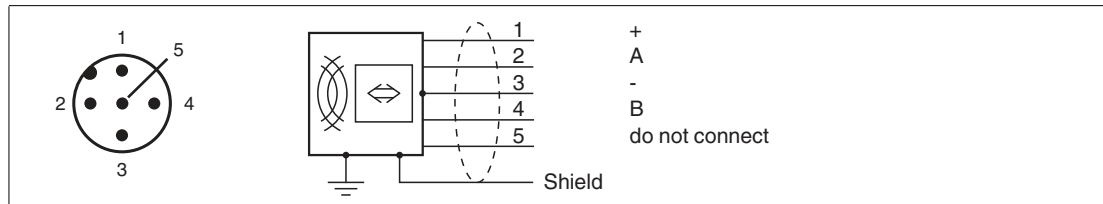


Figure 3.5

- 1 + < 30 V_{DC}, < 450 mA (20 ... 30 V_{DC})
- 2 Data input/output A, RS-485, -7 V ... +12 V
- 3 0 V
- 4 Data input/output B, RS-485, -7 V ... +12 V
- 5 Data output 0 ... 3.3 V_{DC}

IUT-F190-R4-V1-*

The IUT-F190-R4-V1-* read/write head is connected to an RS-485 serial interface of the parent device via the M12 x 1 connector via a point-to-point connection. The read/write head has an internal terminator on the RS-485 interface. For this reason, only one read/write head is provided within an RS-485 network. It is not possible to build an RS-485 network with multiple read/write heads. The factory-set transfer rate of the interface is 38,400 bit/s.

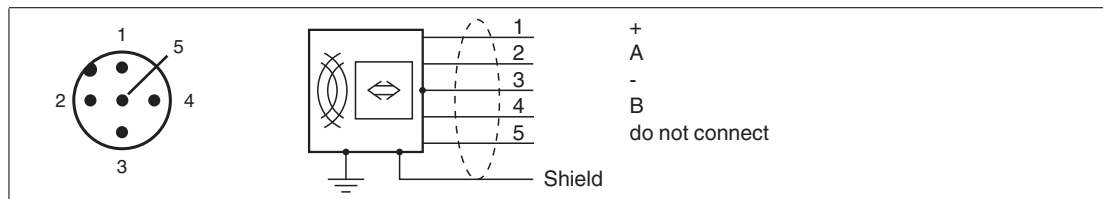



Figure 3.6

- 1 + < 30 V_{DC}, < 450 mA (20 ... 30 V_{DC})
- 2 Data input/output A, RS-485, -7 V ... +12 V
- 3 0 V
- 4 Data input/output B, RS-485, -7 V ... +12 V
- 5 Data output 0 ... 3.3 V_{DC}

Ground connection

The ground connection of the read/write head is positioned on the right-hand side when viewed from the front, if the cable outlet is facing downward. The ground conductor is screwed to the housing with a crimp connector. In order to guarantee safe grounding, mount the serrated washer between the crimp connectors and the housing.

The screw connection, which is marked with the symbol \oplus or \perp depending on the device type, is used to connect the functional earth.

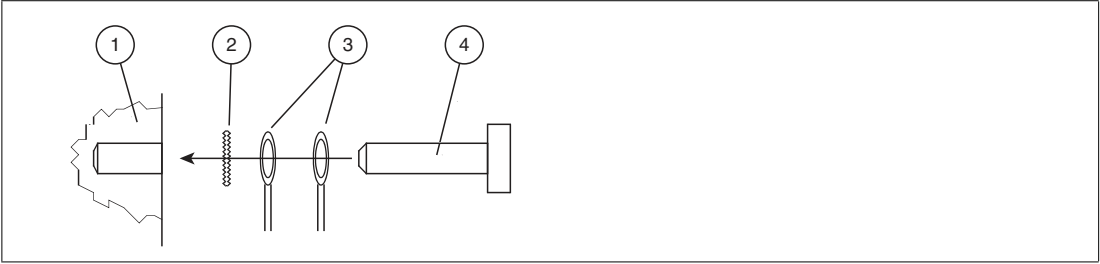

- 1 Housing
- 2 Serrated lock washer
- 3 Crimp connector
- 4 Lock screw

Use a ground conductor lead with a cross-section of at least 4 mm².
Tighten the retaining bolt to a tightening torque of 1.6 Nm ± 0.4 Nm.

3.8 Scope of Delivery

- Read/write head
- Quick start guide

3.9 Accessories

3.9.1 IDENTControl

The IUH-F190-V1-* read/write head can be connected to Pepperl+Fuchs IDENT*Control* control interfaces.



Interface	Designation
4 read/write heads:	
Ethernet	IC-KP-B17-AIDA1
2 read/write heads:	
PROFIBUS	IC-KP2-2HB6-V15B
Ethernet	IC-KP2-2HB17-2V1D
EtherCAT	IC-KP2-2HB21-2V1D
Serial	IC-KP2-2HRX-2V1

2020-03

Interface	Designation
1 read/write head:	
PROFIBUS	IC-KP2-1HB6-V15B IC-KP2-1HB6-2V15B
Ethernet	IC-KP2-1HB17-2V1D
Serial	IC-KP2-1HRX-2V1

Table 3.1

3.9.2 Read/Write Tags

Type	Designation
EPC Gen 2 (ISO/IEC 18000-63)	IUC72-F152-M-FR1 IUC72-F152-M-FR2 IUC76-50-FR1 IUC76-50-FR2 IUC76-F157-M-FR1 IUC76-F157-M-FR2 IUC76-F203-M-FR1 IUC76-F203-M-FR2 IUC76-C8-T14-GBL IUC77-F151-M-GBL IUC77-25L100-GBL IUC77-25L110-GBL

Table 3.2

3.9.3 Connection cable for R/W heads and trigger sensors

Compatible connection cables with shielding are available for connecting the R/W heads and trigger sensors.

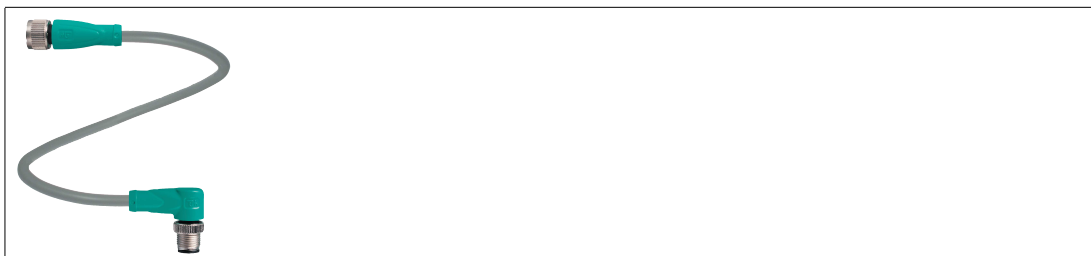


Figure 3.7

Accessories	Description
2 m long (straight female, angled male)	V1-G-2M-PUR-ABG-V1-W
5 m long (straight female, angled male)	V1-G-5M-PUR-ABG-V1-W
10 m long (straight female, angled male)	V1-G-10M-PUR-ABG-V1-W
20 m long (straight female, angled male)	V1-G-20M-PUR-ABG-V1-W
Field attachable female connector, straight, shielded	V1-G-ABG-PG9
Field attachable male connector, straight, shielded	V1S-G-ABG-PG9
Field attachable female connector, angled, shielded	V1-W-ABG-PG9
Field attachable male connector, angled, shielded	V1S-W-ABG-PG9
Dummy plug M12x1	VAZ-V1-B3

3.9.4 Cable connectors for the power supply

Compatible M12 sockets with an open cable end for connecting the IDENTControl to a power supply are available in different lengths.

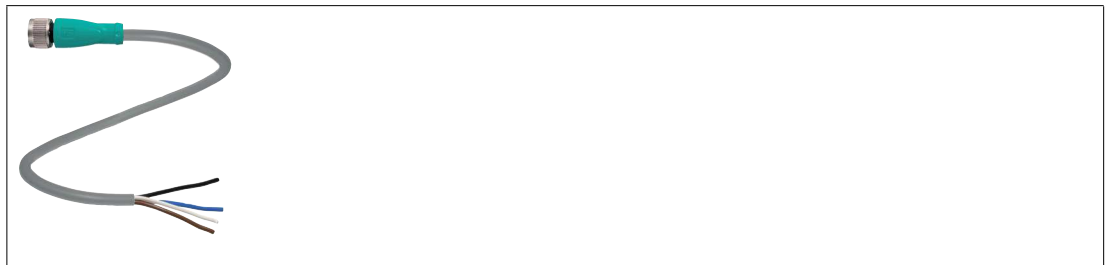


Figure 3.8

Accessories	Designation
Length 2 m (straight socket)	V1-G-2M-PUR
Length 5 m (straight socket)	V1-G-5M-PUR
Length 10 m (straight socket)	V1-G-10M-PUR

3.9.5 Mounting set

Multiple mounting brackets are available to mount the read/write head on the wall or on a pipe.

Accessories	Designation
Mounting bracket for wall and pipe mounting	IUZ-MH12
Mounting bracket for wall mounting	IUZ-MH13
Mounting bracket for pipe mounting	IUZ-MH15

4 Installation

4.1 Storage and Transportation

Keep the original packaging. Always store and transport the device in the original packaging. Store the device in a clean and dry environment. The permitted ambient conditions must be considered, see datasheet.

4.2 Unpacking

Check the product for damage while unpacking. In the event of damage to the product, inform the post office or parcel service and notify the supplier.

Check the package contents against your purchase order and the shipping documents for:

- Delivery quantity
- Device type and version in accordance with the type label
- Any accessories ordered

Retain the original packaging in case you have to store or ship the device again at a later date. Should you have any questions, please contact Pepperl+Fuchs.

4.3 Mounting



Warning!

Malfunctions with pacemakers

This device does **not** exceed the permissible limits for electromagnetic fields. Maintain a minimum distance of 25 cm between the device and your pacemaker.

Inadequate distance from the read/write head can result in inhibitions, reprogramming, or incorrect stimulation pulses.



Warning!

Dysfonctionnement du stimulateur cardiaque

Cet appareil ne dépasse **pas** les limites admissibles pour les champs électromagnétiques. Maintenez une distance minimale de 25 cm entre l'appareil et votre stimulateur cardiaque.

Si la distance à la tête de lecture / écriture est trop courte, des impulsions d'inhibition, de reprogrammation ou de stimulation incorrecte peuvent se produire.



Warning!

Hot surfaces

Be careful not to burn your fingers when handling the device! After shutting down the device, wait at least half an hour before handling the device.



Warning!

Surfaces chaudes

Attention, risque de brûlure lors de la manipulation de l'appareil! Après la mise hors tension, laissez l'appareil refroidir pendant au moins une demi-heure avant de le toucher.

The read/write head is intended for wall mounting or mounting on brackets in internal areas. Please mount the read/write head using only the holes provided in the housing. The preferred mounting direction is with the cable connection facing vertically downwards.

**Note**

Do not route the connection cable in the detection range of the antenna.

To attach the read/write head, use 3 screws with a diameter of 4 mm, as well as mounting materials that are suitable for the type of mounting surface. The tightening torque of the screws depends on the type of mounting.

**Caution!**

Mounting the read/write head

Make sure that the read/write head is firmly attached to the mounting surface.

**Caution!**

Assemblage de la tête de lecture / écriture

Assurez-vous que la tête de lecture / écriture est fermement connectée à la terre.

**Note**

The installation recommendations made in this document are based on favorable conditions. Pepperl+Fuchs provides no guarantee of correct function in cross environments.


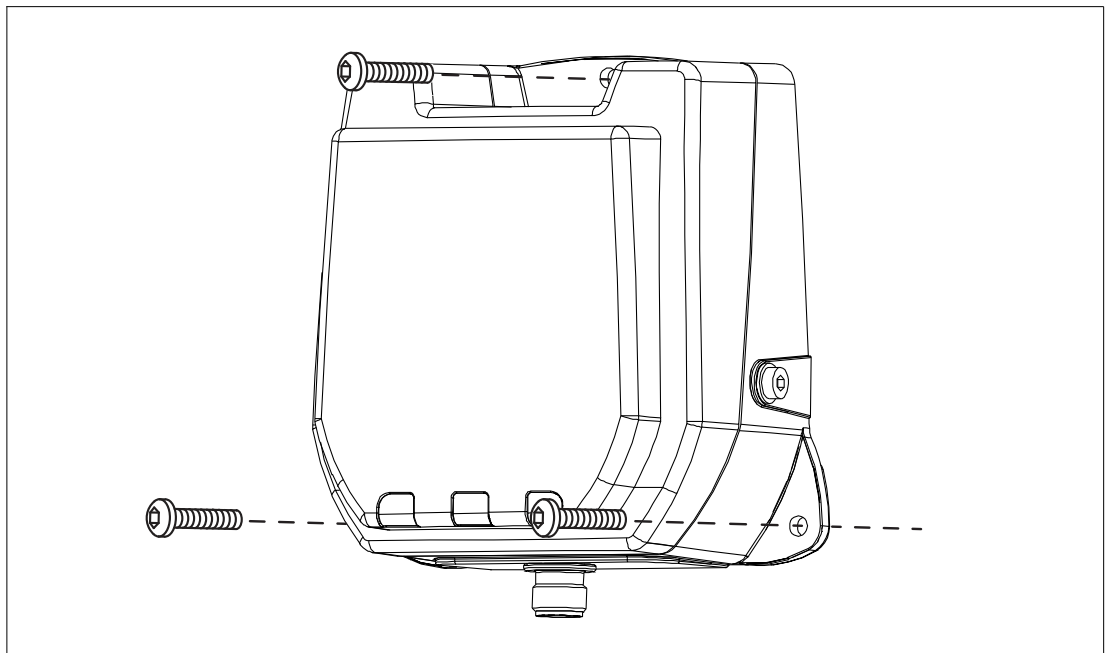
Mounting the read/write head

Figure 4.1


4.3.1 Room Orientation

The alignment of the read/write tag antennae in relation to the antennae of the read/write head influences the detection range of the system. Make sure the antennae are aligned parallel to each other.

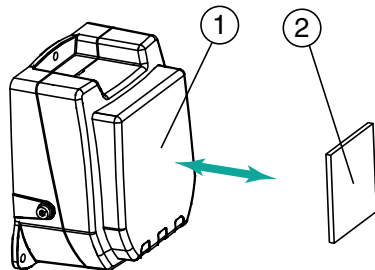

Optimum alignment of the tag

- Good communication between the read/write head and tag

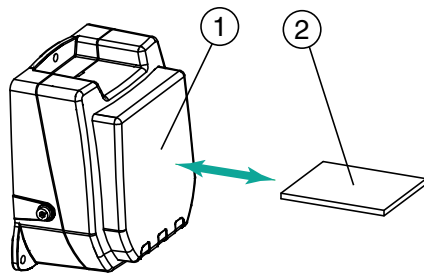

Poor alignment of the tag

- Insufficient communication between the read/write head and tag

- ① Read/write head
② Tag

4.3.2 Minimum Distances

When positioning the read/write head, please observe the minimum distances. The lateral distance between the read/write head and metals or liquids should be at least 50 cm. The distance between the read/write head and the ground should be at least 50 cm.

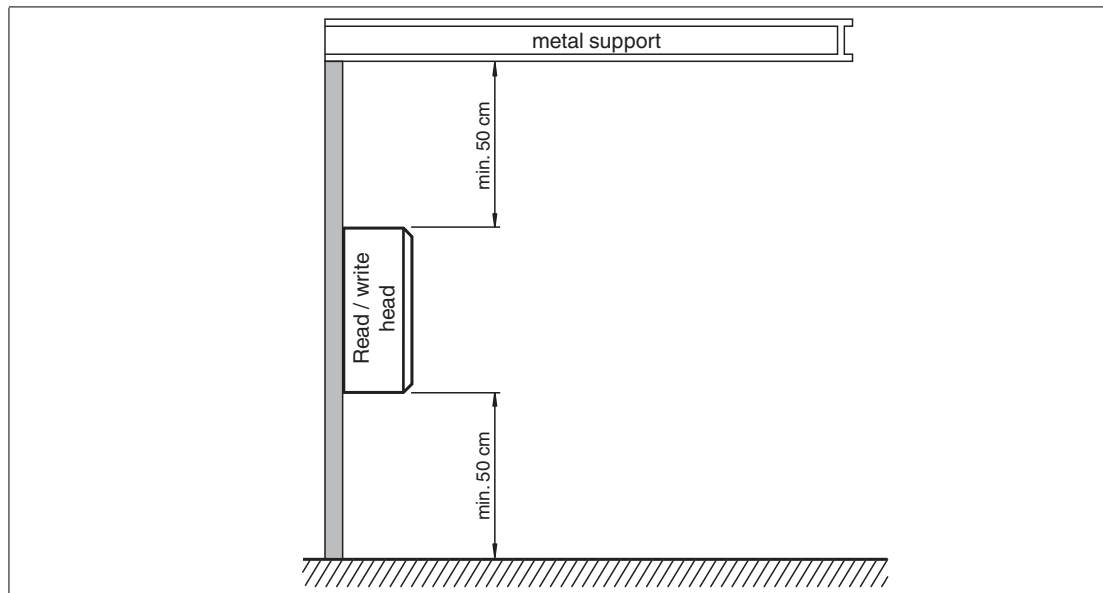


Figure 4.2

During simultaneous operation of several read/write heads, only one read/write head may ever communicate with a tag at any given time. When arranging the read/write heads, make sure that the measurement ranges do not overlap. You can enlarge or reduce the size of the measurement range by changing the transmitting power. Determine the measurement range of each read/write head at the mounting location.



Note

During mounting, take into account how the read/write heads may cause interference with each other. The further the transmission channels of the read/write heads are from each other, the lower the risk of interference.

If you want to transmit with just one read/write head at any given time, use the multiplex mode of the IDENTControl control interface. Multiplex operating mode allows chronologically exclusive access to tags, and prevents mutual interference from read/write heads. For a precise description, see the manual for your control interface.

4.3.3

Polarization

The polarization of the electromagnetic wave emitted by an antenna depends on the type of antenna and is defined for the electromagnetic field component of the electromagnetic wave. Polarization can be either linear or circular. In the case of an electromagnetic wave with linear polarization, the direction of the vector of the electromagnetic field component is spatially constant and therefore dependent on the position of the antenna. Linear polarization can be either vertical or horizontal.

To achieve the maximum detection range for a UHF system, the polarization of the read/write head must match the polarization of the tag so that both have the same spatial orientation. Refer to the relevant data sheet to find the polarization of the tag.

The integrated antenna of the read/write head has dual linear polarization. The read/write head operates in combined mode by default. In combined mode, both horizontal and vertical polarization are used for each read/write access. This increases the reading reliability of tags with an unknown location in the room.

If the orientation of the tags is known, you can optimize the access time by setting a fixed polarization. To do this, you can switch the polarization to horizontally linear polarization or vertically linear polarization in the software. The linear polarization plane refers to the preferred mounting direction with the cable connection mounted vertically downwards.



Figure 4.3 (1) = Vertical polarization plane
(2) = Horizontal polarization plane

4.4

Connection

Connect the IUH-F190-V1-* read/write head to the IDENTControl control interface using a shielded cordset (see chapter 3.9.3). Ensure that the shield fully encapsulates the connection cable to avoid EMC interference. (see chapter 4.5)

Connect the IUT-F190-R4-V1-* read/write head to the higher level control unit using a shielded cordset. Ensure that the shield is fully encapsulating so that interference is dissipated via the protective earth connections to avoid EMC disturbances.

**Warning!**

Incorrect electrical connection

Damage to the device or plant caused by incorrect electrical connection.


Check all connections in the plant before commissioning the device.

After connecting the supply voltage, the POWER LED on the device lights up green. If the LED does not light up on the device, the power supply is not connected correctly.

4.5

EMC Concept

The outstanding noise immunity of the IDENTControl against emission and immission is based on its consistent shielding design, which uses the principle of the Faraday cage. Interference is caught in the shield and safely diverted via the ground connections.

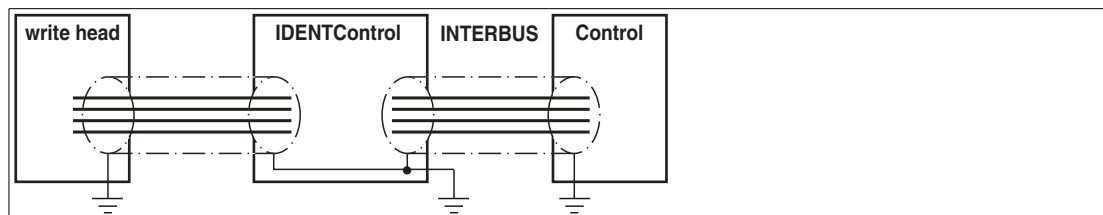

The cable shielding is used to discharge electromagnetic interference. When shielding a cable, you must connect both sides of the shield to ground with low resistance and low inductance.

**Note**

If cables with double shields are used, e.g. wire mesh and metalized foil, the both shields must be connected together, with low resistance, at the ends when making up the cable.

Power supply cables are the source of much interference, e.g. from the supply lines of 3-phase electric motors. For this reason, the parallel laying of power supply cables with data and signal cables should be avoided, particularly in the same cable duct.

**Note**

The circuit ground is conductively connected to the housing of the write/read head and to the protective ground. (Connection image → see Figure 3.5 on page 26)

5 Commissioning

5.1 Definitions

5.1.1 Display

Angle brackets contain the abbreviated meaning of a command structure, e.g., <Data>

The index _{hex} or .xx denotes a hexadecimal number.

hex_{ASCII} denotes a value in the hexadecimal system, specified in ASCII characters.

Example: 10_{dec} corresponds to A_{hex}; A_{ASCII} corresponds to 41_{hex}. see chapter 9.2

5.1.2 Legend

<ChanNo>:	IDENT _{Control} channel
<CHCK>:	1 byte, 8-bit check sum with the addition of all preceding characters, without overflow
<Data>:	Data with the size <WordNum> multiplied by 4 bytes
<DataLength>:	Length of the data specified to a command, 2 characters binary, HighByte, LowByte
eirp:	equivalent isotropically radiated power
erp:	effective radiated power
<ETX>:	1 byte = 03 _{hex}
<read-only code>:	TID, 4 bytes + an optional 4 or 8 bytes
<Ldata>:	Length of the data in bytes, 2 bytes Use in multiframe protocol
<Length>	1 character hex _{ASCII} = number of data bytes Permitted values in the read/write head IUH*: 2, 4, 6, 8, A, C, E
<Luii>:	Length of the UII in bytes, 2 bytes Use in multiframe protocol
<LogicalOperation>:	Links several filters; OR = 0; AND = 1 If one filter only is used, this value is ignored
<MaskData>:	Mask specification
<MaskLength>:	Mask length in bits, values: 00...FF
<MemBank>:	Number of the memory bank (see parameter MB)
<ParamTyp>:	Parameter type, 2 bytes, or 2 ASCII characters
<Negate>:	Negates the mask comparison; not negated = 0; negated = 1
<PC>:	Protocol control word according to EPC Gen 2 (ISO/IEC 18000-63), 2 bytes, describes characteristics such as the length of the UI/EPC
<SpecialFixcode>:	<PC> & <UII/EPC>
<Status>:	1 ASCII character (see chapter 6.8)
<StartAddress>:	Start address in the selected memory bank in bits, values: 0000...FFFF
<SystemCode>:	= U (for read/write head IUH*)
<TagType>:	2 ASCII characters
<UII/EPC>:	Unique Item Identifier, memory area of a tag in accordance with EPC Gen 2 (ISO/IEC 18000-63), in which the EPC code is stored

<WordAddr>:	Word start address in the read/write tag, 4 hex _{ASCII} characters, range from "0000h" to "FFFF", depending on tag type
<WordNum>:	Number of words to be read or written, 2 hex _{ASCII} characters. Range from "01" through "20" depending on the tag type, word lengths are 4 bytes

5.2 Sensor Settings



Warning!

Device not configured or configured incorrectly

Configure the device prior to commissioning. A device that has not been configured or configured incorrectly may lead to faults in the plant.



Warning!

L'appareil non configuré ou mal configuré

Configurez l'appareil avant de l'utiliser. Un périphérique mal configuré peut provoquer des erreurs dans le système.

You must configure the control interface before commissioning the IUH-F190-V1-* read/write head. To do so, refer to the "Commissioning" chapter of the manual for your control interface.

Configure the read/write heads with the described system commands (see chapter 6.6.1). For a parameterization example, see chapter 5.3.



Caution!

Uncontrolled triggered processes

Before commissioning the device, make sure that all processes are running smoothly; otherwise damage may occur in the plant.



Caution!

Processus déclenchés incontrôlés

Avant la mise en service de l'appareil, assurez-vous que tous les processus fonctionnent de manière contrôlée, sinon vous risquez d'endommager le système.

5.3 Operation via the Command Interface

This section shows you how to commission the IUH-F190-V1-* read/write head using an IDENTControl control interface with serial interface. The commissioning procedure described relates to the RS-232 interface and involves a PC. The examples include the syntax for coding the commands and parameters via the Ethernet TCP/IP and PROFIBUS/PROFINET interfaces. Further details about these codes and the factory settings for your IDENTControl control interface can be found in the corresponding manual.

The commissioning of the IUT-F190-R4-V1-* read/write head with integrated RS-485 interface is also carried out using the above commands and parameters. For details regarding the IUT F190-R4-V1-* read/write head see chapter 6.7

Example:

In the examples below, the read/write head is connected to channel 1 of the control interface.

The outputs follow the multiframe protocol, see table "Responses Depending on **Protocol Mode QV**" on page 56.

Reading Tags



Enhanced Read Read-Only Code

Send the enhanced read read-only code command to the read/write head. The "RF ON" LED on the read/write head lights up blue.

	Serial	Ethernet	PROFIBUS/PROFINET
Command:	EF1	.00.04.1D.03	.1D.03
Confirmation:	-	.00.06.1D.03.FF.0B	.1D.03.FF.0B
Response:	.35.31	.00.06.1D.03.05.0C	.1D.03.05.0C

Table 5.1 Enhanced read read-only code, no tag in the detection range

Move a tag into the read/write head's detection range. When the tag has been detected and the read-only code has been read out, the "READ / WRITE" LED on the read/write head lights up yellow. The read-only code is displayed in the terminal program.

	Serial	Ethernet	PROFIBUS/PROFINET
Response:	.30.31.00.0E.30. 00.30.14.F7.33.7 C.00.1F.00.00.00 .00.01.00.08.E2. 00.60.03.14.42.D 6.D1	.00.20.1D.03.00.0D.00.0E. 30.00.30.14.F7.33.7C.00.1 F.00.00.00.00.01.00.08.E2 .00.60.03.14.42.D6.D1	.1D.03.00.0D.00.0E.30.00. 30.14.F7.33.7C.00.1F.00.0 0.00.00.01.00.08.E2.00.60 .03.14.42.D6.D1

Table 5.2 Enhanced read read-only code, tag is entering the detection range

Describing Tags

Single Write Special Read-Only Code

Send the single write special read-only code command to the read/write head while a tag is in the detection range. See "**Single Write Special Read-Only Code SP**" on page 42 and see chapter 3.2.4.

	Serial	Ethernet	PROFIBUS/PROFINET
Command:	SP1E.30.00.30.1 4.F7.33.7C.00.1F .00.00.03.1C.6E	.00.14.0D.E3.00.00.30.00. 30.14.F7.33.7C.00.1F.00.0 0.03.1C.6E	.0D.E3.00.00.30.00.30.14. F7.33.7C.00.1F.00.00.03.1 C.6E
Confirmation:	-	.00.06.0D.E3.FF.2D	.0D.E3.FF.2D
Response:	.30.31.00.0E.30. 00.30.14.F7.33.7 C.00.1F.00.00.03 .1C.6E .46.31.30.30.30.3 1	.00.16.0D.03.00.2E.00.0E. 30.00.30.14.F7.33.7C.00.1 F.00.00.03.1C.6E .00.0A.0D.03.0F.2F.30.30. 30.31	0D.03.00.2E.00.0E.30.00. 30.14.F7.33.7C.00.1F.00.0 0.03.1C.6E .0D.03.0F.2F.30.30.30.31

Single Read Special Read-Only Code

As confirmation, read out the read-only code of the tag within the read/write head's detection range via the single read special read-only code command. See "**Single Read Special Read-Only Code SS**" on page 42.

	Serial	Ethernet	PROFIBUS/PROFINET
Command:	SS10	.00.04.0A.02	.0A.02
Confirmation:	-	.00.06.0A.02.FF.30	.0A.02.FF.30
Response:	.30.31.00.0E.30. 00.30.14.F7.33.7 C.00.1F.00.00.03 .1C.6E .46.31.30.30.30.3 1	.00.16.0A.02.00.31.00.0E. 30.00.30.14.F7.33.7C.00.1 F.00.00.03.1C.6E .00.0A.0A.02.0F.32.30.30. 30.31	.0A.02.00.31.00.0E.30.00. 30.14.F7.33.7C.00.1F.00.0 0.03.1C.6E .0A.02.0F.32.30.30.30.31



Parameterizing the Read/Write Head

Requesting and Setting the Transmission Power

Read out the read/write head's transmission power with the read parameter PT command:

	Serial	Ethernet	PROFIBUS/PROFINET
Command:	RP1UPT.00.00	.00.0A.BE.03.00.55.50.54.00.00	.BE.03.00.55.50.54.00.00
Confirmation:	-	.00.06.BE.03.FF.33	.BE.03.FF.33
Response:	.30.31.00.32	.00.0A.BE.03.00.34.00.02.00.32	.BE.03.00.34.00.02.00.32

The read/write head's set transmission power is 50 mW (32_{hex} corresponding to 50_{dec}).

Change the transmission power of the read/write head to 100 mW (100_{dec} corresponding to 64_{hex}) via the write parameter PT command:

	Serial	Ethernet	PROFIBUS/PROFINET
Command:	WP1UPT.00.02.00.64	.00.0C.BF.03.00.55.50.54.00.02.00.64	.BF.03.00.55.50.54.04.00.02.00.64
Confirmation:	-	.00.06.BF.03.FF.35	.BF.03.FF.35
Response:	.30.31	.00.06.BF.03.00.36	.BF.03.00.36

6 Operation

6.1 General

The sections below contain information about the commands that relate to your read/write head. The commands are described using the example of an IDENTControl control interface with serial interface. All other generally applicable commands and error messages or status messages can be found in the manual for your IDENTControl control interface.


Commissioning of the IUT-F190-R4-V1-* read/write head with integrated RS-485 interface is also carried out using the commands and parameters described. For details regarding the IUT-F190-R4-V1-* read/write head see chapter 6.7

6.2 Basic Command Process

Interference Due to Multipath Propagation

The electromagnetic waves radiated by the read/write head do not just follow the direct route to the tag, but are also reflected off objects in the vicinity, meaning that multiple partial waves overlap with the waves radiated by the read/write head.

This overlap causes interference (i.e., exaggeration and dampening of the reception field strength), leading to almost complete degradation. Depending on the environment, several reflections may occur with differing intensity and distance. These different reflections lead to a field strength in the measurement range that is difficult to predict. In the areas of degradation, the prevailing field strength is weaker than the minimum detection field strength of the tag. As a result, the tag cannot be activated for communication. Exaggeration of the field strength may lead to unwanted excessive detection ranges.

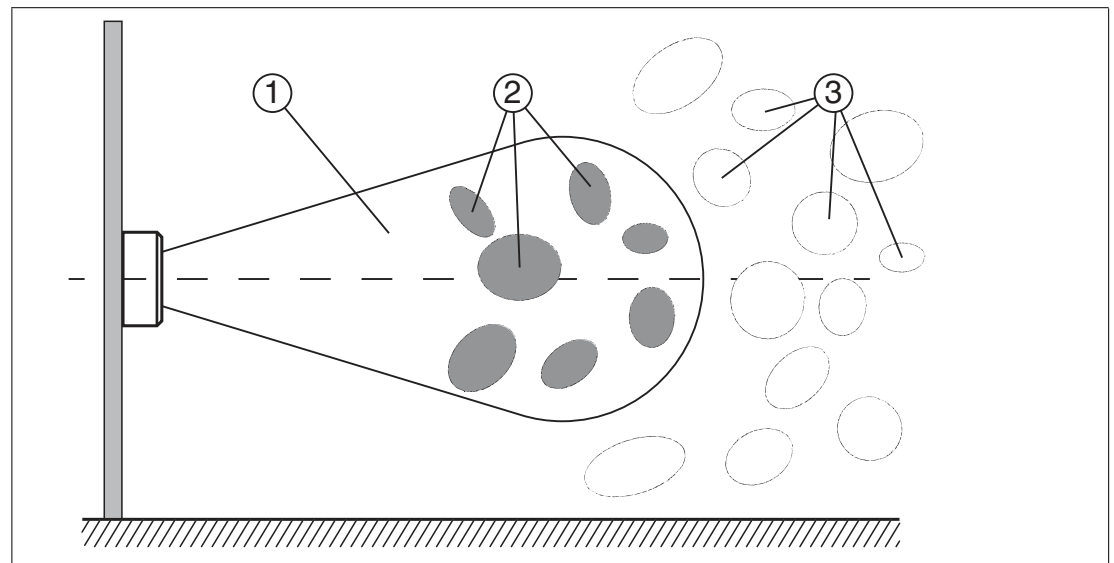

1. Detection range
2. Degradation
3. Excessive detection ranges

The reflections and the resulting spatial inhomogeneity of the field strength depend on the frequency used. The absolute value of the field strength depends on the transmission power. Since the tags move in the measurement range of the read/write head, and the environment can change, it is advisable to repeat the commands at different transmission frequencies and at varying power. Different transmission frequencies are advisable, since the manufacturing tolerances and the immediate environment of the tag have an effect on the tag's resonance frequency.

Several Tags in the Measurement Range

Each read or write command can access one, several, or all tags in a measurement range. The process is controlled by filter masks, which are managed via the commands Set Filter Mask (**FI**) and Activate/Deactivate Filter (**MF**). These commands allow you to detect specific tags in the measurement range. see chapter 6.5.

Read Algorithm

To communicate with tags with the maximum possible probability, the read/write head uses an algorithm that varies the transmitting power and frequency. You can set the corresponding values for this algorithm via the parameters Power Transmit (**PT**), Channel Frequency (**CD**), or Number of Channels (**NC**) for the frequency hopping spread spectrum, and Number of Attempts (**TA**). The number of set attempts is executed for each pairing of power and frequency. This process takes a long time, but leads to a high read/write rate. The algorithm runs through all combinations because it may be the case that a tag can be detected only by one specific combination of power and frequency. This applies when the read/write head uses a programmable frequency list as the frequency access method. This frequency list is defined by parameter **CD**.

If the country identifier specifies a frequency hopping spread spectrum, the channels defined there are used. This is not influenced by the programmable frequency list. You can adjust the number of channels used for each attempt via the Number of Channels parameter (**NC**).

With the parameter Search Algorithm Cancellation Criteria (**NT**), you can specify the number of tags to be processed. If you know the number of tags in the measurement range, you can use this total number as the value for parameter **NT**. If the number of tags found corresponds to or exceeds the value defined in parameter **NT**, the algorithm cancels any further runs to save time.



Tip

If analysis of a specific application shows that a particular frequency and transmission power are sufficient to execute commands successfully, the parameters can be set accordingly, subject to national legislation. This measure reduces the processing time.

6.3

Command Overview

The commands in the list are described in detail on the following pages.

The following uses the command syntax for the IUH-F190-V1-* read/write heads with IDENT-Control serial control interface. The channel number <ChanNo> is always included in the commands. The command syntax is identical to the syntax of the IUT-F190-R4-V1-* read/write heads with integrated RS-485 interface, except for the channel number. For the IUT-F190-R4-V1-* read/write heads, the channel number <ChanNo> is not included in single-drop mode. In multi-drop mode, the channel number <ChanNo> is replaced by the device address <DeviceNo>. See chapter 6.7.

Read/Write Commands

Abbreviation	Command description
SF	See " Single Read Read-Only Code SF " on page 41
EF	See " Enhanced Read Read-Only Code EF " on page 41
SS	See " Single Read Special Read-Only Code SS " on page 42
ES	See " Enhanced Read Special Read-Only Code ES " on page 42
SP	See " Single Write Special Read-Only Code SP " on page 42
SR, #SR	See " Single Read Words SR " on page 43
ER, #ER	See " Enhanced Read Words ER " on page 44
SW, #SW	See " Single Write Words SW " on page 44

Abbrevia- tion	Command description
EW, #EW	See " Enhanced Write Words EW " on page 44
KI	See " Kill UHF Tag KI " on page 45

Filter Commands

Abbrevia- tion	Command description
FI	See " Set Filter Mask FI " on page 45
MF	See " Activate/Deactivate Filter MF " on page 47

Configuration Commands

Abbrevia- tion	Command description
RP	See " Read Parameters " on page 49
WP	See " Write Parameters " on page 50

6.4

Read/Write Commands

The tag's memory structure is based on the following read/write commands in accordance with EPC Gen 2 (ISO/IEC 18000-63). See chapter 3.2.3.

Single Read Read-Only Code SF

One attempt is made to read a read-only code (TID). The read-only code is 4, 8, or 12 bytes long, and comprises a 4-byte part number, which denotes the tag type, and optionally a tag with a unique serial number of 4 or 8 bytes. Details see chapter 3.2.3.

Command: SF <ChanNo> <CHCK> <ETX>

Response: <Status> <ChanNo> <LuII> <UII> <Length> <Fixcode> <CHCK> <ETX>
F <ChanNo> 0001 <CHCK> <ETX>

<Length> = Length of the <Fixcode> in ASCII_{hex}

Example:

SF1 reads the read-only code to IDENT*Control* channel 1.

Enhanced Read Read-Only Code EF

This command continuously attempts to read a read-only code (TID). If a read-only code is read, this is reported once. If there is no tag in the detection range, or if the tag leaves the detection range, a status 5 message is reported.

Command: EF <ChanNo> <CHCK> <ETX>

Response: <Status> <ChanNo> <LuII> <UII> <Length> <Fixcode> <CHCK> <ETX>

<Length> = Length of the <Fixcode> in ASCII_{hex}

Example:

EF1 continuously reads the read-only code to IDENT*Control* Channel 1

Single Read Special Read-Only Code SS

This command reads the UII segment from tags according to EPC Gen2 (ISO/IEC 18000-63).

Command: SS <ChanNo> 0 <CHCK> <ETX>

Response: <Status> <ChanNo> <Length> <SpecialFixcode> <CHCK> <ETX>
F <ChanNo> 0001 <CHCK> <ETX>

Example:

SS10 reads the entire UII segment.

The tag type determines the maximum length of the UII/EPC. The actual length of the UII/EPC is defined via the protocol control word <PC>. The data is structured as follows:

<Length> = Length of the <SpecialFixcode> in ASCII_{hex}

<SpecialFixcode> = <PC> & <UII/EPC>

<PC> corresponds to the protocol control word in accordance with EPC Gen 2 (ISO/IEC 18000-63), 2 bytes long.

<UII/EPC> contains the usage data.

Note

UII/EPC

If there are multiple tags in the measurement range with the same UII/EPC, the identical tags are reported with Status A.

Enhanced Read Special Read-Only Code ES

This command continuously attempts to read the UII segment from tags according to EPC Gen 2 (ISO/IEC 18000-63). If the <SpecialFixcode> of a tag is read, this is reported once. If there is no tag in the detection range, or if the tag leaves the measurement range, a status 5 is reported.

Command: ES <ChanNo> 0 <CHCK> <ETX>

Response: <Status> <ChanNo> <Length> <SpecialFixcode> <CHCK> <ETX>

Example:

ES10 continuously reads the UII segment.

The tag type determines the maximum length of the UII/EPC. The actual length of the UII/EPC is defined via the protocol control word <PC>. The data is structured as follows:

<Length> = Length of the <SpecialFixcode> in ASCII_{hex}

<SpecialFixcode> = <PC> & <UII/EPC>

<PC> corresponds to the protocol control word in accordance with EPC Gen 2 (ISO/IEC 18000-63), 2 bytes long.

<UII/EPC> contains the usage data.

Note

UII/EPC

If there are multiple tags in the measurement range with the same UII/EPC, the identical tags are reported with Status A.

Single Write Special Read-Only Code SP

This command writes a <Length> octet long UII/EPC code to tags according to EPC Gen 2 (ISO/IEC 18000-63).



Command: SP <ChanNo> <Length> <SpecialFixcode> <CHCK> <ETX>
 Response: <Status> <ChanNo> <NUL> <Length> <SpecialFixcode> <CHCK> <ETX> F
 <ChanNo> 0001 <CHCK> <ETX>

The data length <Length> must be a whole number multiple of 2 octets because in accordance with EPC Gen 2 (ISO/IEC 18000-63), <UII/EPC> must be written in 16-bit words. Only the lengths 2_{dec} , 4_{dec} , ..., 14_{dec} ($= 2_{\text{ASCII}}$, 4_{ASCII} , ..., E_{ASCII}) are permissible. The length is shown in hexadecimal format, and includes the length of PC and UII/EPC. If a UII/EPC of 96 bits is written, this results in $2 + 12 = 14$ octets = E_{ASCII} octet.

<Length> = Length of the <SpecialFixcode> in $\text{ASCII}_{\text{hex}}$

<SpecialFixcode> = <PC> & <UII/EPC>

<PC> corresponds to the protocol control word in accordance with EPC Gen 2 (ISO/IEC 18000-63), 2 octets long.

<UII/EPC> contains the usage data.

Example:

SP1E.30.00.30.14.F7.33.7C.00.1F.00.00.03.1C.6E writes the value ".30.00" for <PC>, and the UII/EPC code ".30.14.F7.33.7C.00.1F.00.00.03.1C.6E" with a length of $2 + 12$ octets = 14 octets to IDENTControl channel 1.

When using this command, make sure that the protocol control word contains the correct length of the following UII/EPC. If this is not executed correctly, the complete data is not output on the subsequent read operation because the command SS uses the length in the protocol control word for the output.

In accordance with EPC Gen 2 (ISO/IEC 18000-63), the protocol control word consists of two octets. The five highest value bits denote the length of the <UII/EPC> in words (= 16 bit):

00000 _{bin}	No word	0 bits
00001 _{bin}	One word	16 bits
00010 _{bin}	Two words	32 bits
...
11111 _{bin}	31 words	496 bits

The meaning of the remaining bits is described in EPC Gen 2 (ISO/IEC 18000-63). If a UII/EPC has the length 12 octets, i.e., 6 words (00110_{bin}), and all other bits are equal to 0, the protocol control word corresponds to 00110000 00000000_{bin} or 3000_{hex}. If some of the other bits are not equal to 0, this produces a different protocol control word.



Note

Several Tags in the Measurement Range

If there is more than one tag in the measurement range when this command is run, the UII is written to the first tag only. Status A is output for all other tags.

Single Read Words SR

One attempt is made to read <WordNum> 32-bit words from address <WordAddr>.

Command: SR <ChanNo> <WordAddr> <WordNum> <CHCK> <ETX>
 Response: <Status><ChanNo><Luii><UII><Ldata><Data><CHCK> <ETX>
 F <ChanNo> 0001<CHCK> <ETX>

Example:

SR1000101 reads a 4-byte word from memory address "0001."

**Note**

The memory bank (**MB**) parameter defines the bank accessed by this command. see "**Memory Module for Tag Accesses to the "Memory Bank" MB**" on page 52.

Enhanced Read Words ER

Continuous attempts are made to read <WordNum> 32-bit words from the address <WordAddr>. Only changing data is transferred via the interface. When a read/write tag leaves the read range, status 5 is output.

Command: ER <ChanNo> <WordAddr> <WordNum> <CHCK> <ETX>

Response: <Status><ChanNo><Luii><Ull><Ldata><Data><CHCK> <ETX>

Example:

ER1000101 continuously reads a 4-byte word from memory address "0001".

**Note**

The memory bank (**MB**) parameter defines the bank accessed by this command. see "**Memory Module for Tag Accesses to the "Memory Bank" MB**" on page 52.

Single Write Words SW

One attempt is made to write <WordNum> 32-bit words from the address <WordAddr>.

Command: SW <ChanNo> <WordAddr> <WordNum> <Data> <CHCK> <ETX>

Response: <Status> <ChanNo> <Luii> <Ull> <CHCK> <ETX>
F <ChanNo> 0001 <CHCK> <ETX>

Example:

SW1000101ABCD writes the 4-byte-long word "ABCD" from memory address "0001".

**Note**

The memory bank (**MB**) parameter defines the bank accessed by this command. see "**Memory Module for Tag Accesses to the "Memory Bank" MB**" on page 52.

**Note**

When writing to the Ull/EPC area (MB = 1), note that it is not possible to write to the CRC. The first writable address is 0x0001. The protocol control word <PC> begins at this address. Use the command #SW.

Enhanced Write Words EW

This command continuously attempts to write <WordNum> 32-bit words from the address <WordAddr>. If the command was executed successfully, a status 0 is reported. If there is no tag in the detection range, or if the tag leaves the detection range, a status 5 is reported.

Command: EW <ChanNo> <WordAddr> <WordNum> <Data> <CHCK> <ETX>

Response: <Status> <ChanNo> <Luii> <Ull><CHCK> <ETX>

Example:

EW1000101ABCD continuously writes the 4-byte long word "ABCD" from memory address "0001".

**Note**

The memory bank (**MB**) parameter defines the bank accessed by this command. see "**Memory Module for Tag Accesses to the "Memory Bank" MB**" on page 52.

**Note****16-Bit Read/Write Commands**

The read/write commands SR, ER, SW, and EW are interpreted as 16-bit versions by means of a preceding # symbol.

The 16-bit read/write commands behave in the same way as the 32-bit versions.

- 16-bit commands write or read a word with a length of 2 bytes.
- 32-bit commands write or read a word with a length of 4 bytes.

Example:

#SW1000202ABCD corresponds to SW1000101ABCD

Kill UHF Tag KI

This command sets a UHF tag to a state where no further access is possible. The command can be executed only if a valid password has previously been set in segment Bank 00 via the command SW. See chapter 3.2.3. The password must have at least 1 non-zero bit.

Command: KI <ChanNo>.30.30 <UllLength>< UllData> <PassWord> <RecomBits>
<CHCK> <ETX>

Response: <Status> <ChanNo> <LuII> <Ull> <CHCK> <ETX>
F <ChanNo> 0001 <CHCK> <ETX>

<UllLength> = Mask length for the Ull/EPC in bits, values: 00 ... FF, always begins at Address 0. The information is entered as 2 hex_{ASCII} characters.

<UllData> = Specification of the mask for the Ull, in octets

<PassWord> = Password for killing a UHF tag, 4 octets

<RecomBits> = Recommission bits, always set to zero

Example:

KI10018.E2.00.90abcd.00 kills a UHF tag with a Ull starting ".E2.00.90" and using the password "abcd."

6.5**Filter Commands**

Each read or write command can access one, several, or all tags in a measurement range. The process is controlled by filter masks, which are managed via the commands Set Filter Mask (**FI**) and Activate/Deactivate Filter (**MF**). These commands allow you to detect specific tags in the measurement range. see chapter 6.5.

Set Filter Mask FI

Using command FI, you can define a filter mask for accessing the tags located in the box. You can define up to 3 filters (0-2). The following syntax is used:

Command: FI <ChanNo> <FilterNumber> <MemBank> <Negate> <LogicalOperation> 0
<StartAddress> <MaskLength> <MaskData> <CHCK> <ETX>

Response: <Status> <ChanNo> <CHCK> <ETX>

<MemBank> = Memory segment to which the filter is to be applied. The information is entered as one hex_{ASCII} character.

<StartAddress> = Address of the bit at which the filter mask begins. Specified in hex_{ASCII}. Values: 0000 ... FFFF

<MaskLength> = Length of the mask in bits. The information is entered as 2 hex_{ASCII} characters.

<MaskData> = Defines the actual filter mask

Example:

There are three tags in the measurement range of the read/write head. Each tag has a unique identifier of <PC> & <UII/EPC>:

	<PC> & <UII/EPC>
1. Tag	.34.00.E2.00.92.01.20.51.70.00.00.00.02.76
2. Tag	.34.00.E2.00.92.01.20.51.70.00.00.00.02.66
3. Tag	.34.00.E2.00.90.51.33.02.00.92.18.20.56.15

If you want to detect the 3rd tag, the filter mask is: **FI101000001028.34.00.E2.00.90**

Meaning of Bits

Command	FI	= Command
<ChanNo>	1	= Channel 1
<FilterNumber>	0	= First filter used, filter number = 0
<MemBank>	1	= Memory bank 01; should be filtered to UII/EPC
<Negate>	0	= Not negated
<LogicalOperation>	0	= OR link not relevant here because only one filter is set
0	0	= Value is always 0
<StartAddress>	0010	= Start address 10 _{hex} or bit 16
<MaskLength>	28	= Mask length, 28 _{hex} = 40 _{dec} , i.e., 40 bits
<MaskData>	34.00.E2.00.90	= Actual Mask

Owing to the structure of the memory bank for UII/EPC (→ see image on page 12), the start address is located at bit 16. The CRC-16 value occupies the memory position from bit 0 through bit 15; the PC starts at bit 16.

If you activate the filter with the command MF, and then execute command SS10, you receive only one response from the corresponding tag even if other tags are located in the measurement range:

.34.00.E2.00.90.51.33.02.00.92.18.20.56.15

The value <Negate> controls the mask comparison. 0 = not negated, 1 = negated. If you negate the filtering by setting the value <Negate> in the command FI101100001028.34.00.E2.00.90, you receive a response from the tags that does not match the filter:

.34.00.E2.00.92.01.20.51.70.00.00.00.02.76

.34.00.E2.00.92.01.20.51.70.00.00.00.02.66

If you prefer to filter only at the start of <UII/EPC>, and ignore the <PC>, send the command FI10100000**2018**.E2.00.90. The start address is 20_{hex}, the mask length has 24 bits, and the mask is .E2.00.90.

The value <LogicalOperation> logically links several filters with each other and is evaluated only if more than one filter is used. If only one filter is used, this value is ignored. 0 = OR, 1 = AND

Other examples include:

FI102000000018.**E2.00.10** sets filter 0 so that all tags with a TID beginning with .E2.00.10 are detected.

FI111100002008.22 sets filter 1 so that all tags whose UII/EPC do not begin .22 are detected.

FI1010100010700.**00123456789012** sets filter 0 so that the tag with the SpecialFixcode (PC+UII/EPC) 0.00123456789012 is detected.

The letter x can be used as a wildcard for the channel and filter number. Command **Flxx0000000000** resets the three filters for all *IDENTControl* channels.

Activate/Deactivate Filter MF

Command MF activates or deactivates the filter masks.

Command: MF<ChanNo><Value><CHCK><ETX>

Response: <Status><ChanNo><CHCK><ETX>

The following values are possible:

0 = Deactivate filter masks

1 = Activate filter masks - mode 1

2 = Activate filter masks - mode 2

Example:


MF11 activates the filter masks for *IDENTControl* channel 1

Command MF - Mode 1

In total, there are 15 tags in the measurement range of the read/write head, with three groups of five marked as either A, B, or C. The filter is now set to "B" by the command FI.

If you execute command MF11 (Activate Filter - Mode 1), this command affects all subsequent commands.

If a write command is executed next, all "B" tags in the measurement range are selected and are assigned a 'Selected' flag. The write command is executed only for tags with a Selected flag.

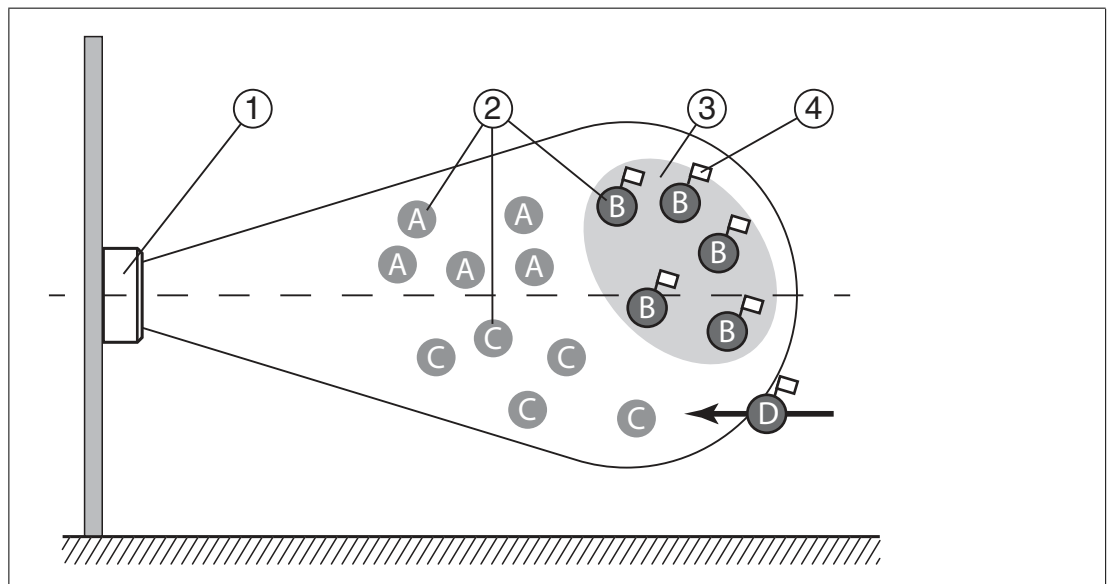

When the filter is set to "B", command MF11 (Filter Activated - Mode 1) selects all "B" tags; the following commands address the selected "B" tags.

- ① Read/write head
- ② Tags "A", "B", "C"


- ③ Filter mask
- ④ Selected flag

Command MF - Mode 2

In total, there are 15 tags in the measurement range of the read/write head, with three groups of five marked as either A, B, or C. The filter is set to "B" by command FI.

If you execute command MF12 (Activate Filter - Mode 2), this command affects all subsequent commands.

If a write command is executed next, all tags in the measurement range that are not "B" tags are selected. These tags are assigned a 'Selected' flag. The write command is executed only for tags with no Selected flag.

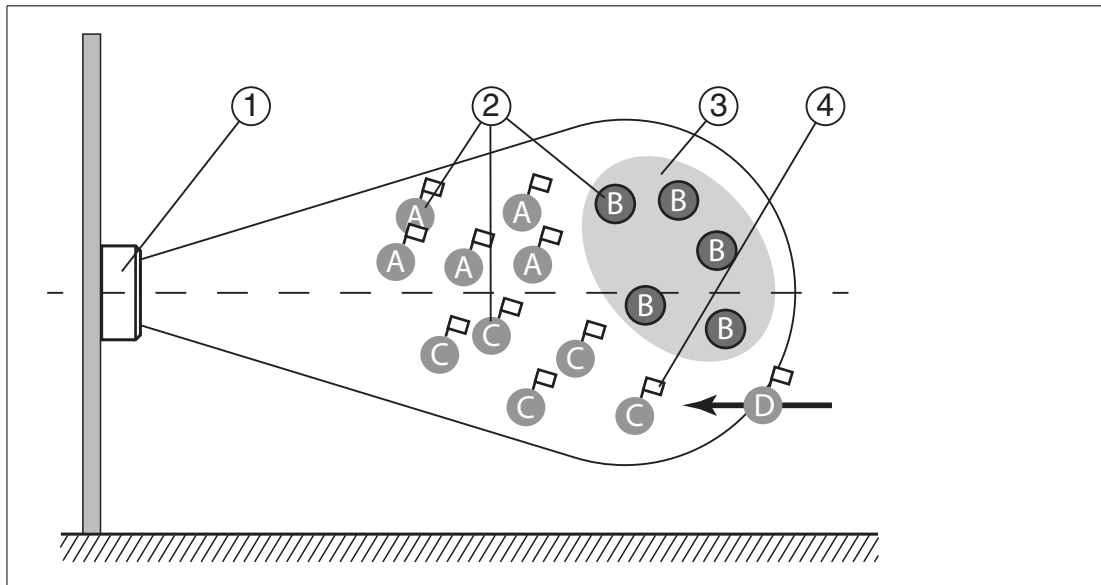

When the filter is set to "B," command MF12 (Filter Activated - Mode 2) selects all "A" and "C" tags, and the following commands address the **unselected** "B" tags.

- ① Read/write head
- ② Tags "A", "B", "C"
- ③ Filter mask inverted
- ④ Selected flag

Difference Between Command MF - Mode 1 and Command MF - Mode 2

In both cases, the subsequent commands are applied only to the "B" tags in the measurement range.

With MF11, "B" tags are assigned a Selected flag. With MF12, "B" tags are not assigned a Selected flag.

If a "D" tag with a Selected flag from the operation of a different read/write head enters the measurement range, this "D" tag will execute the subsequent commands if MF11 is activated. If MF12 is activated, this "D" tag will not execute the subsequent commands.

6.6 Configuration Commands

The response to a configuration command is a status message from the read/write head. During the read operation, a status message and the corresponding data are received as the response.

6.6.1 Read and Write Parameters

With the read parameter (**RP**) and write parameter (**WP**) configuration commands, you can read/write the following parameters:

Abbreviation	Page	Parameter is readable/writeable
AP	See " Antenna Polarization AP " on page 50	Readable/writeable
CD	See " CD Transmission Channels " on page 50	Readable/writeable for RC = 1, 4, 5, 6, 8 Readable for RC = 2, 3, 7, 9, 10, 11, 12, 13, 14
E5	See " Number of Unsuccessful Attempts until Status 5 "Enhanced Status 5" E5 " on page 51	Readable/writeable
FL	See " Read Out Filter Mask "Filter List" FL " on page 51	Readable
IF	See " Output Additional Information, "Information" IF " on page 52	Readable/writeable
MB	See " Memory Module for Tag Accesses to the "Memory Bank" MB " on page 52	Readable/writeable
MD	See " Retrieve Additional Information MD " on page 52	Readable
MF	See " Measurement of Reflected Transmitting Power "Measure Reflection" MF " on page 53	Readable
NC	See " Number of Channels NC " on page 53	Readable/writeable for RC = 2, 3, 7, 9, 10, 11, 12, 13, 14 Readable for RC = 1, 4, 5, 6, 8
NT	See " Search Algorithm Cancellation Criteria "number of tags to find" NT " on page 54	Readable/writeable
PT	See " Transmission Power "Power Transmit" PT " on page 54	Readable/writeable
QV	See " Protocol Mode QV " on page 55	Readable/writeable
QW	See " Q Value QW " on page 56	Readable/writeable
RC	See " Country Identifier, "Region Code" " on page 57	Readable
RD	See " Reset to Default, RD " on page 58	Writeable
SM	See " Transmission Pauses in "Sensing Mode" SM " on page 58	Readable/writeable
TA	See " Number of Attempts "Tries Allowed" TA " on page 59	Readable/writeable

The parameters are saved in the read/write head as nonvolatile.

Read Parameters

The RP command reads configuration parameters from the read/write head.

Command: RP <ChanNo> <SystemCode> <ParamTyp> <DataLength> <Data> <CHCK> <ETX>

Response: <Status> <ChanNo> <Data> <CHCK> <ETX>

<SystemCode> = U_{ASCII} for IUH-*

<ParamTyp> = 2 bytes ASCII

<DataLength> = Length of <Data> in command, 2 bytes binary

<Data> = Optional additional information

Example:

RP1UE5.00.00 outputs the number of unsuccessful read attempts until status 5.

Write Parameters

Command WP writes configuration parameters to the read/write head.

Command: WP <ChanNo> <SystemCode> <ParamTyp> <DataLength> <Data>
<CHCK> <ETX>

Response: <Status> <ChanNo> <CHCK> <ETX>

<SystemCode> = U_{ASCII} for IUH-*

<ParamTyp> = 2 bytes ASCII

<DataLength> = Length of <Data>, 2 bytes binary

<Data> = Optional additional information

Example:

WP1UE5.00.01.05 sets the number of unsuccessful read attempts to status 5 on 5 attempts.

6.6.2

Parameter

Antenna Polarization AP

This parameter switches polarization to horizontally linear, vertically linear, or combined mode, or reads out the polarization currently set.

ParamTyp: AP

Default: AP = C

Value range: C = combined¹
H = Horizontally linear
V = Vertically linear

1. Combined horizontally linear and vertically linear for each read/write attempt

Example:

WP1UAP.00.01H switches the polarization to horizontally linear

WP1UAP.00.01C switches the polarization to combined mode

RP1UAP.00.00 reads out the set polarization

Set the polarization according to the read/write tag used (see chapter 4.3.3). You can achieve a better detection range if the polarization of the read/write head corresponds to the polarization of the read/write tag.

Set the polarization to combined mode if the orientation of the tag is not known. In combined mode, first horizontal polarization and then vertical polarization is used for each read/write attempt. This achieves the same results as when circular polarization is used. The duration of the read/write operation is extended in combined mode.

CD Transmission Channels

Frequency Access Method **Programmable frequency list:**

This parameter sets the number and sequence of transmission channels or reads out the number and sequence of transmission channels.

Frequency Access Method **Frequency hopping spread spectrum:**

This parameter reads out the number and sequence of transmission channels for the frequency hopping spread spectrum.

ParamTyp: CD

Default: Depending on the country-specific settings, see chapter 3.3.

Value range: Depending on the country-specific settings, see chapter 3.3.

Example:

WP1UCD.00.04.07.0A.04.0D defines the sequence 7, 10, 4, and 13 as the permitted transmission channels

WP1UCD.00.01.0A allows the read/write head to use only transmission channel 10

RP1UCD.00.00 reads out the sequence of permitted transmission channels



Tip

If you have parameterized several transmission channels with the parameter CD, the read/write head executes each write or read command on all defined transmission channels sequentially according to the defined sequence. If several additional transmission power values are parameterized (see "**Transmission Power "Power Transmit" PT**" on page 54), all set transmission powers are executed on each transmission channel for each read or write command. See chapter 6.2.

Number of Unsuccessful Attempts until Status 5 "Enhanced Status 5" E5

This parameter sets the number of unsuccessful read/write attempts until a status 5 is output for an enhanced command, or outputs the number.

Status 0 and status A depend on this parameter, and are output immediately.

ParamTyp: E5

Default: E5 = 5

Value range: 0 ... 252

Example:

WP1UE5.00.01.05 sets the number to 5 unsuccessful read/write attempts until a status 5 is output

RP1UE5.00.00 outputs the number

If the number of read/write attempts is reduced:

⊕ Faster response time in enhanced mode.

⊖ Status 5 messages in the event of unstable tag reading.

Read Out Filter Mask "Filter List" FL

Parameter FL contains the current configuration of the filter masks as set during execution of command FI. The output format corresponds to the data input format of command FI without the filter number. The parameter can only be read, but not set.

ParamTyp: FL

Value range: 0 ... 2

Example:

RP1UFL.00.01.02 outputs the current configuration of filter 2

Response: <Status><ChanNo><MemBank><Negate><LogicalOperation>0<StartAddress><MaskLength><MaskData><CHCK><ETX>

Output Additional Information, "Information" IF

Parameter IF allows you to output additional information providing that the reading was successful and the multiframe protocol is activated. See "**Protocol Mode QV**" on page 55. The additional information is the RSSI value of the reading, the transmission channel used, and transmitting power of this reading.

ParamTyp: IF
 Default: IF = 0
 Value range: 0, 1

Example:

WP1UIF.00.01.01 prompts the read/write head to output additional information after each successful reading.

RP1UIF.00.00 outputs the value of parameter IF.

The additional information is output in the following format:
 B<ChanNo> <InfoTyp> <RSSI> <TxChannel> <TxPower>

To distinguish the additional information from the standard outputs, the output begins with the status B as the first ASCII character, followed by the *IDENTControl* channel. This is followed by the <InfoTyp>, which indicates that this is a type .01 information frame. The output ends with the RSSI value (1 byte), the transmission channel used (1 byte), and the power used (2 bytes). The RSSI value is between 0 (= low) and 100 (= high).

Meaning of the bytes in response .42.31.01.1A.0D.00.14

.42	=	Status B _{ASCII} to identify the additional information
.31	=	1 _{ASCII} , <i>IDENTControl</i> channel 1
.01	=	The information type
.1A	=	26 _{dec} , RSSI value
.0D	=	13 _{dec} , tag access to transmission channel 13
.00.14	=	20 _{dec} , transmission power 20 mW

Memory Module for Tag Accesses to the "Memory Bank" MB

This parameter specifies the bank accessed by the read/write commands SR, ER, SW, and EW. See chapter 3.2.3.

ParamTyp: MB
 Default: MB = .03 = User Memory
 Value range: .00 = reserved (password area)
 .01 = UII/EPC
 .02 = TID
 .03 = User Memory

Example:

WP1UMB.00.01.03 sets the bank to User Memory

Retrieve Additional Information MD

This parameter allows you to retrieve information about the last successful tag access. This returns the RSSI value with a length of 1 byte, the transmission channel used with a length of 1 byte, and the transmitting power with a length of 2 bytes. The RSSI value may be between 0 (= low) and 100 (= high).

Parameter MD allows the same data to be accessed in the single-frame protocol as is available in the multiframe protocol with parameter IF. See "**Protocol Mode QV**" on page 55 and see "**Output Additional Information, "Information" IF**" on page 52.

ParamTyp: MD

Example:

RP1UMD.00.01.01 returns the response .30.01.13.04.00.32

Explanation of the response:

<Status> = 0

<ChanNo> = 1

<RSSI> = .13 = 19_{dec}

<TXChannel> = .04

<TXPower> = .00.32 = 50_{dec} mW

Measurement of Reflected Transmitting Power "Measure Reflection" MF

This parameter measures the reflected transmitting power of the antenna and the environment.

The results are output as one byte per transmission channel. The transmission channels are dependent on the country-specific settings, see chapter 3.3.

The parameter is not output for the "combined" antenna polarization.

To obtain the reflected power in dBm, subtract the value 100 from the return value in decimal notation.

ParamTyp: MF

Value range: -18 .. +21 dBm¹

¹ 0 or 255 is returned for values outside the value range

Example:

If the country identifier RC = 01 (= 4 channels), RP1UMF.00.00 returns the response 01.63.64.67.65

Explanation of the response:

<Status> = 0

<ChanNo> = 1

<PCh04> = .63 = 99_{dec} results in 99 - 100 = -1 dBm

<PCh07> = .64 = 100_{dec} results in 100 - 100 = 0 dBm

<PCh10> = .67 = 103_{dec} results in 103 - 100 = +3 dBm

<PCh13> = .65 = 101_{dec} results in 101 - 100 = +1 dBm

Number of Channels NC

Frequency Access Method **Frequency hopping spread spectrum**:

Parameter NC indicates the number of channels on which a write or read attempt is performed. If the value 4 is set, the read/write head attempts to read the tag on 4 different frequencies when a read command is given. The parameter can be read and written.

Frequency Access Method **Parameterizable frequency list**:

The parameter can be read only. The parameter specifies the number of transmission channels that are set with parameter CD.

ParamTyp: NC

Default: NC = 4

Value range: 1 ... 50

Example:

WP1UNC.00.01.02 allows two channels for a read attempt.

RP1UNC.00.00 reads out the number of channels set.

Search Algorithm Cancellation Criteria "number of tags to find" NT

Parameter NT specifies the number of tags in the measurement range that the read/write head searches for. Each command is repeated in accordance with the parameters Transmission Power (PT), Transmission Channel (CD) or Number of Channels (NC), and Number of Attempts (TA) (see chapter 6.2). If the number of tags found during the repeat operations reaches or exceeds the NT value, all further runs are canceled. The command is canceled, and the data is output.

If the number of tags is set to 255 (= .FF), the function is deactivated. This parameter does not affect "enhanced" commands, but only "single" commands.

ParamTyp: NT
 Default: NT = 255
 Value range: 0 ... 254, 255 = off

Example:

The value WP1UNT.00.01.05 sets the number of tags in the measurement range for which the read/write head searches to 5.

RP1UNT.00.00 outputs the set value.

Transmission Power "Power Transmit" PT

This parameter sets the transmission power in mW or reads out the transmission power set.

ParamTyp: PT
 Default: Depending on the country-specific settings, see chapter 3.3.
 Value range: Depending on the country-specific settings, see chapter 3.3.

Example:

WP1UPT.00.02.00.32 sets the transmission power to 50 mW

RP1UPT.00.00 reads out the transmission power currently set

- ⊕ Higher detection range if you increase the transmission power.
- ⊖ Possible excessive detection ranges if you increase the transmission power.
- ⊖ Adjacent read/write heads might be affected if the range increases.



Tip

The highest transmission power does not necessarily lead to the largest read range. Vary the transmission power to achieve the optimum read result.



Note

You can operate the read/write head only with internally specified transmission power. You can use the command WP1UPT.00.02.xx.xx in the software to enter any transmission power within the specified range of values. The read/write head automatically sets the transmission power to the next lowest value available. Any entries outside the specified value range are returned as errors. Command RP1UPT.00.00 allows you to read out the power value that is currently set.

**Tip**

You can parameterize the read/write head with several transmission power values:

Command WP1UPT.00.06.00.14.00.32.00.64 sets 3 transmission power values for 20 mW, 50 mW, and 100 mW. Each read and write command is executed in succession for all 3 transmission power values. If one or more tags are found and successfully read/written for the first transmission power, the command is still executed with all other transmission powers to reach any other tags that may be available.

You can specify a maximum of 10 transmission power values. If several additional transmission channels are selected (see "**CD Transmission Channels**" on page 50), all set powers are executed on each transmission channel for each read or write command. See chapter 6.2.

Protocol Mode QV

Parameter QV toggles the output protocol between single frame and multiframe.

In single-frame protocol, the output corresponds to the Pepperl+Fuchs standard in LF and HF systems. If there is more than one tag in the measurement range, status A is output as a warning.

In the multiframe protocol, each tag that responded is output. An output is then issued which begins with status F, contains the number of responses, and completes the full command output.

ParamTyp: QV
 Default: QV = .4D
 Value range: .53 = S for single-frame protocol
 .4D = M for multiframe protocol

Example:

WP1UQV.00.01.4D sets the protocol to multiframe.

RP1UQV.00.00 outputs the set protocol mode.

If QV = M, the following responses are made to a single read command (SR):

Response: 0<ChanNo><Luii><UII1><Ldata><data><CHCK><ETX>
 0<ChanNo><Luii><UII2><Ldata><data><CHCK><ETX>
 0<ChanNo><Luii><UII3><Ldata><data><CHCK><ETX>
 F<ChanNo>0003<CHCK><ETX>

One read command was executed to which three tags responded. For each tag, the status, the IDENTControl channel, the length of the UII, the UII, the length of the data, and the read data are output. Then an output is issued with status F, the IDENTControl channel, and the number of tags that responded.

<Luii> = Length of <UII> in bytes, 2 bytes

<Ldata> = Length of <data> in bytes, 2 bytes

Responses Depending on Protocol Mode QV

Command	Parameter QV	
	Single-frame protocol	Multiframe protocol
	Responses	
SS	No tag: 5<ChanNo> One tag: 0<ChanNo><UII> Two tags: A<ChanNo>	No tag: F<ChanNo>0000 Two tags: 0<ChanNo><Luii><UII1> 0<ChanNo><Luii><UII2> F<ChanNo>0002
SR, #SR SF	No tag: 5<ChanNo> One tag: 0<ChanNo><data> Two tags: A<ChanNo>	No tag: F<ChanNo>0000 Two tags: 0<ChanNo><Luii><UII1><Ldata><data> 0<ChanNo><Luii><UII2><Ldata><data> F<ChanNo>0002
SW, #SW	No tag: 5<ChanNo> One tag: 0<ChanNo> Two tags: A<ChanNo>	No tag: F<ChanNo>0000 Two tags: 0<ChanNo><Luii><UII1> 0<ChanNo><Luii><UII2> F<ChanNo>0002
ES	No tag: 5<ChanNo> One tag added: 0<ChanNo><UII> One tag added: A<ChanNo> One tag removed: 0<ChanNo><UII> All tags removed: 5<ChanNo>	No tag: 5<ChanNo> Two tags added: 0<ChanNo><Luii><UII1> 0<ChanNo><Luii><UII2> Tag 1 removed: 5<ChanNo><Luii><UII1> Tag 3 added: 0<ChanNo><Luii><UII3> Tag 4 added (UII same as tag 2): A<ChanNo><Luii><UII2> All tags removed: 5<ChanNo><Luii><UII2> 5<ChanNo><Luii><UII3> 5<ChanNo><Luii><UII2>
SP	No tag: 5<ChanNo> One tag: 0<ChanNo> Two tags: A<ChanNo>	No tag: F<ChanNo>0000 One tag: 0<ChanNo><NUL><Luii><UII1> F<ChanNo>0001 Two tags: 0<ChanNo><NUL><Luii><UII1> A<ChanNo><NUL><Luii><UII2> F<ChanNo>0002

Table 6.1 <CHCK><ETX> omitted at the end of each response due to space requirements

Q Value QW

In accordance with EPC Gen 2 (ISO/IEC 18000-63), the slotted ALOHA principle is used for anticollision. The number of time slots is defined as 2^Q . The parameter QW defines the Q value. As a guide, the number of time slots should roughly correspond to the number of expected tags in the measurement range.

ParamTyp: QW
 Default: QW = 2
 Value range: 0 ... 7

Example:

WP1UQW.00.01.04 sets the Q value to 4. The read/write head therefore works with $2^4 = 16$ time slots.

RP1UQW.00.00 outputs the set Q value.

Country Identifier, "Region Code"

The RC parameter reads out the country identifier.

ParamTyp: RC

Value range: See the following table "country identifiers"

Example:

RP1URC.00.00 reads out the set country identifier.

The country identifier consists of 2 bytes. The first byte always has the value 80. The second byte corresponds to the country identifier. The serial response .30.31.80.01 indicates the country identifier for Europe.

Country Identifiers for IUH-F190-V1-FR1* and IUT-F190-R4-V1-FR1*

Country Identifier	Occupied Frequency Bandwidth Frequency Access Method	Country or Region
01	865.6 MHz – 867.6 MHz Parameterizable frequency list	EU and other countries subject to EN 302208
04	865.0 MHz – 867.0 MHz Parameterizable frequency list	India
05	866.0 MHz – 868.0 MHz Parameterizable frequency list	Singapore, Vietnam
06	866.0 MHz – 867.6 MHz Parameterizable frequency list	Russia
15	867.6 MHz – 868.0 MHz Parameterizable frequency list	Morocco

Country Identifiers for IUH-F190-V1-FR2* and IUT-F190-R4-V1-FR2*

Country Identifier	Occupied Frequency Bandwidth Frequency Access Method	Country or Region
02	902 MHz – 928 MHz Frequency hopping spread spectrum	USA Canada Mexico Argentina Colombia
03	920 MHz – 925 MHz Frequency hopping spread spectrum	China
07	915 MHz – 928 MHz Frequency hopping spread spectrum	Brazil
08	916.7 MHz – 920.5 MHz Parameterizable frequency list	Japan
09	917.2 MHz – 920.4 MHz Frequency hopping spread spectrum	South Korea
10	920 MHz – 926 MHz Frequency hopping spread spectrum	Australia
11	921.5 MHz – 928 MHz Frequency hopping spread spectrum	New Zealand
12	920 MHz – 925 MHz Frequency hopping spread spectrum	Hong Kong Thailand

Country Identifier	Occupied Frequency Bandwidth Frequency Access Method	Country or Region
13	919 MHz – 923 MHz Frequency hopping spread spectrum	Malaysia
14	920 MHz – 925 MHz Frequency hopping spread spectrum	Singapore Vietnam
16	920 MHz – 923 MHz Frequency hopping spread spectrum	Indonesia

Table 6.2 For technical details regarding the regional settings, see chapter 3.3.

Reset to Default, RD

This parameter returns all settings of the read/write head to the default configuration.

ParamTyp: RD

Example:
WP1URD.00.00

Default Value Parameters

Abbreviation	Parameter	Default value
AP	Antenna Polarization AP	Combined mode (C)
CD	Transmission Channels	Depending on the country-specific settings, see chapter 3.3
E5	Number of unsuccessful attempts up to Status 5	5
FL	Read Out Filter Mask	No filter set (0)
IF	Output Additional Information	Off (0)
MB	Memory Bank	User Memory (3)
MD	Retrieve Additional Information MD	Not applicable
MF	Measurement of Reflected Transmission Power	Not applicable
NC	Number of Channels	Depending on the country-specific settings, see chapter 3.3
NT	Search Algorithm Cancellation Criteria	Off (255)
PT	Power Transmit	Depending on the country-specific settings, see chapter 3.3
QV	Protocol Mode QV	Multiframe Protocol (M)
QW	Q Value	2
RC	Country Identifier, "Region Code"	Not applicable
RD	Reset to Default	Not applicable
SM	Transmission Pauses in "Sensing Mode"	0
TA	Number of Attempts, "Tries Allowed" TA	2

Transmission Pauses in "Sensing Mode" SM

The parameter SM defines a pause time in milliseconds. This pause time is executed once all runs are complete.

This parameter is especially useful for continuous operation with "enhanced" commands (see chapter 6.4). If you specify transmission pauses, you can operate the read/write head at higher ambient temperatures.

ParamTyp: SM
 Default: SM = 100 ms¹
 SM = 0 ms²
 Value range: 100 ms ... 65,535 ms, 2 bytes³
 0 ms ... 65,535 ms, 2 bytes⁴

1. For all FR1 read/write heads

2. For all FR2 read/write heads

3. For all FR1 read/write heads

4. For all FR2 read/write heads

Example:

WP1USM.00.02.27.10 sets the pause time to 10,000 ms = 10 seconds.

RP1USM.00.00 reads out the pause time.

Number of Attempts "Tries Allowed" TA

This parameter sets the permitted number of write or read attempts, or outputs the permitted number of attempts.

ParamTyp: TA
 Default: TA = 2
 Value range: 1 ... 255

Example:

WP1UTA.00.01.01 permits precisely one attempt (= no repeats)

WP1UTA.00.01.03 permits 3 attempts

RP1UTA.00.00 outputs the permitted number of attempts

If the permitted number of write or read attempts between the read/write head and the tag is increased, this results in:

⊕ More reliable reading and writing.

⊖ Increased response time.

6.7

Read/Write Head IUT-F190-R4-V1-* with Integrated RS-485 Interface

The IUT-F190-R4-V1-* read/write head is connected to the RS-485 serial interface of the parent device via a point-to-point connection. The read/write head has an internal terminator on the RS-485 interface. Only 1 read/write head can be connected within an RS-485 network. It is not possible to build an RS-485 network with multiple read/write heads.



Note

If you use an RS-485/RS-422 to RS-232 converter with automatic baud rate and mode detection, communication problems may occur due to incorrect detection of these parameters. In this case, select the operating mode of the converter manually.

The read/write head can be used in single-drop-mode and in multi-drop mode. In single-drop-mode, the read/write head first executes the respective command and then sends the response. This may take a few seconds. In multi-drop mode, the read/write head immediately sends the confirmation that the read head has understood the command. The read head then starts to execute the command. The actual result of the command must be queried by polling the read/write head.

The IUT-F190-R4-V1-* read/write head is set to single-drop mode at the factory.

Define Function DF

This command is used to switch operating mode:

Single-drop --> Multi-drop

Command: DF42 <CHCK> <ETX>

Multi-drop --> Single-drop

Command: DF <DeviceNo> 41 <CHCK> <ETX>

After changing the operating mode, a power supply reset or an "RS" command must be executed to activate the required operating mode.

6.7.1

Single-drop mode

In this operating mode, the read/write head first executes a command and then sends the response. This may take a few seconds. The command syntax is identical to the syntax of the read/write heads with the IDENTControl control interface, but does not contain the channel number <ChanNo>.



Example

Command: <CommandCode> <CommandParameters> <CHCK> <ETX>

Response: <Status> <Data> <CHCK> <ETX>

You also have the option of replacing <CHCK><ETX> with #<CR>.

A new command can be sent only after a response to the previous command has been received.

System Commands

Configure Interface CI

This command configures the timeout and the baud rate. The values are stored in the nonvolatile memory. Any modifications become active only after a reset has been performed. The timeout is the time after which the read/write head no longer waits for characters in a command. After the timeout expires, the user receives an error message. To deactivate the timeout, the time must be set to "0".

The number of data bits is always 8. A parity bit is not used.

Command: CI <Timeout>, <Baud> <CHCK> <ETX>

Response: <Status> <CHCK> <ETX>

The following settings are possible:

<Timeout>: "0" ... "100" (x 100 ms, timeout in 100 ms steps)

<Baud>: "1,200", "2,400", "4,800", "9,600", "19,200", "38,400"

The default values are a timeout of "0" and a baud rate of "38,400".

Reset RS

This command interrupts all currently running commands. The device settings are reloaded from the non-volatile memory.

Command: RS <CHCK> <ETX>

Response: "2" <CHCK> <ETX>

The command must be executed after a configure interface CI or define function DF, so that the changes become active.

Configuration Commands

See chapter 6.6 and chapter 6.5

Read/Write Commands

See chapter 6.4

6.7.2

Multi-drop mode

In this operating mode, the read/write head immediately sends a confirmation that the command has been understood. The read/write head then starts to execute the command. The actual result of the command must be queried by polling the write/read head. The get data GD command is used for this.



Note

In multi-drop mode, the device address must be specified in each command.

In multi-drop mode, the command syntax differs from the syntax of the read/write heads with the IDENTControl control interface through the addition of device address <DeviceNo> instead of the channel number <ChanNo>.



Example

Command: <CommandCode> <DeviceNo> <CommandParameters> <CHCK> <ETX>

Response: <Status> <DeviceNo> <Data> <CHCK> <ETX>

You also have the option of replacing <CHCK><ETX> with #<CR>.

A new command can be sent only after a response to the previous command has been received.

System Commands

Get Device Address GA

This command reads the device address of a read/write station.

Command: GA <CHCK> <ETX>

Response: <Status> <DeviceNo> <DeviceNo> <CHCK> <ETX>

Set Device Address SD

This command changes the device address in multidrop mode from <OldDeviceNo> to <NewDeviceNo>. The default device address is "FF".

Command: SD <OldDeviceNo> <NewDeviceNo> <CHCK> <ETX>

Response: <Status> <DeviceNo> <CHCK> <ETX>

Configure Interface CI

This command configures the timeout and the baud rate. The values are stored in the nonvolatile memory. Any modifications become active only after a reset has been performed. The timeout is the time after which the read/write head no longer waits for characters in a command. After the timeout expires, the user receives an error message. To deactivate the timeout, the time must be set to "0".

The number of data bits is always 8. A parity bit is not used.

Command: CI <DeviceNo> <Timeout>, <Baud> <CHCK> <ETX>
 Response: <Status> <DeviceNo> <CHCK> <ETX>

The following settings are possible:

<Timeout>: "0" ... "100" (x 100 ms, timeout in 100 ms steps)

<Baud>: "1,200", "2,400", "4,800", "9,600", "19,200", "38,400"

The default values are a timeout of "0" and a baud rate of "38,400".

Reset RS

This command interrupts all currently running commands. The device settings are reloaded from the non-volatile memory.

Command: RS <DeviceNo> <CHCK> <ETX>
 Response: "2" <DeviceNo> <CHCK> <ETX>

The command must be executed after a configure interface CI or define a function DF, so that the changes become active.

Configuration Commands

See chapter 6.6 and see chapter 6.5

The device address must be specified.

Read/Write Commands

See chapter 6.4.

Examples:

Single Read Words SR

The read/write head makes one attempt to read <WordNum> 32-bit words from the address <WordAddr>.

Command: SR <DeviceNo> <WordAddr> <WordNum> <CHCK> <ETX>
 Response: <Status> <DeviceNo> <CHCK> <ETX>

The result of the command must be retrieved with the command GD.

Get Data GD

This command retrieves the data from the read station. Each data record is transferred only once.

Data is only available for read commands. There is no data component for write commands.

Command: GD <DeviceNo> <CHCK> <ETX>
 Response: <Status> <DeviceNo> <ExecCounter>{<Data>}<CHCK> <ETX>

Repeat Response RR

This command triggers a repeat of the last telegram received on 'GD'.

Command: RR <DeviceNo><CHCK> <ETX>
 Response: <Status> <DeviceNo> <ExecCounter> {<Data>} <CHCK> <ETX>

6.8 Error/Status Messages

Status	Description
0	The command was executed correctly.
1	Reserved
2	Switch-on message, reset was executed.
3	Reserved
4	The command is incorrect or incomplete. The parameter is not in the valid area.
5	No read/write tag in the measurement range.
6	Hardware error, e.g., error during self-test or read/write head defective.
7	Internal device error.
8	Reserved
9	The parameterized tag type is not compatible with the connected read head.
A	Singleframe protocol: there are multiple tags in the measurement range (IUH*). Multiframe protocol: There are multiple tags in the measurement range that have the same UII/EPC (IUH*).
B	Indicates the output of additional information (see " Output Additional Information, "Information" IF " on page 52).
C	Reserved
D	Reserved
E	Internal buffer overflow; execute reset.
F	Indicates the end of an output in the multiframe protocol (see " Protocol Mode QV " on page 55).

7 Service and Maintenance

The device is designed and constructed to function stable over long periods of time. For this reason, regular cleaning or maintenance is unnecessary.

8 Troubleshooting

Problem	Solution
Interference from several read/write heads in the direct vicinity	<ul style="list-style-type: none"> • Use the multi-plex mode of the IDENTControl control interface • Change the setting of the transmission channels • Reduce the transmission power
Status A message	<ul style="list-style-type: none"> • Check whether there are multiple tags in the detection range: Remove the tag from the detection range by placing the tag e.g. in a sealed metal container Repeat the read or write operation • Use filter commands • Determine whether multiple tags have the same UII/EPC

9 Appendix

9.1 Dimensions

IUH-F190-V1-* and IUT-F190-R4-V1-*

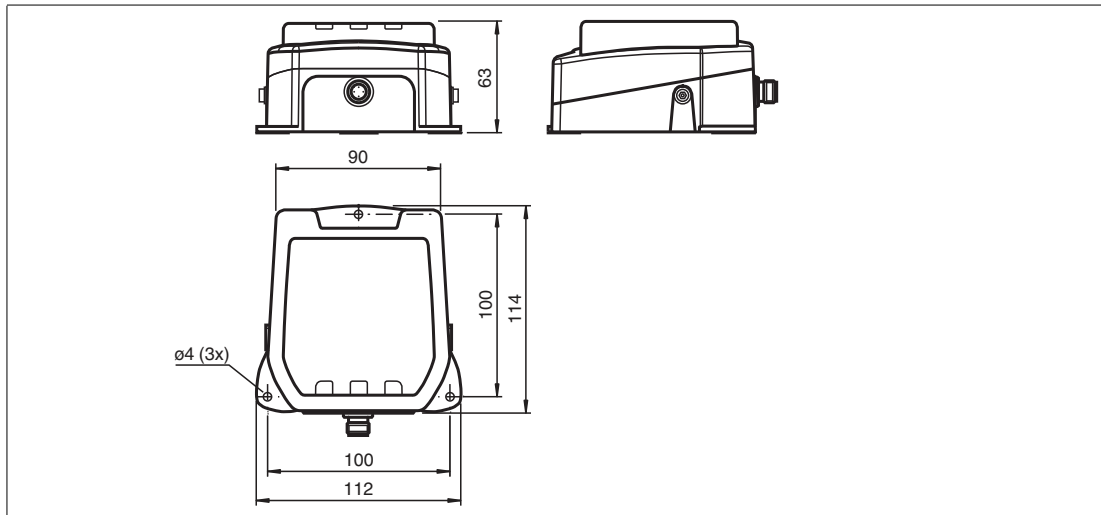


Figure 9.1

9.2 ASCII table

hex	dec	ASCII	hex	dec	ASCII	hex	dec	ASCII	hex	dec	ASCII
00	0	NUL	20	32	Space	40	64	@	60	96	'
01	1	SOH	21	33	!	41	65	A	61	97	a
02	2	STX	22	34	"	42	66	B	62	98	b
03	3	ETX	23	35	#	43	67	C	63	99	c
04	4	EOT	24	36	\$	44	68	D	64	100	d
05	5	ENQ	25	37	%	45	69	E	65	101	e
06	6	ACK	26	38	&	46	70	F	66	102	f
07	7	BEL	27	39	'	47	71	G	67	103	g
08	8	BS	28	40	(48	72	H	68	104	h
09	9	HT	29	41)	49	73	I	69	105	i
0A	10	LF	2A	42	*	4A	74	J	6A	106	j
0B	11	VT	2B	43	+	4B	75	K	6B	107	k
0C	12	FF	2C	44	,	4C	76	L	6C	108	l
0D	13	CR	2D	45	-	4D	77	M	6D	109	m
0E	14	SO	2E	46	.	4E	78	N	6E	110	n
0F	15	SI	2F	47	/	4F	79	O	6F	111	o
10	16	DLE	30	48	0	50	80	P	70	112	p
11	17	DC1	31	49	1	51	81	Q	71	113	q
12	18	DC2	32	50	2	52	82	R	72	114	r
13	19	DC3	33	51	3	53	83	S	73	115	s
14	20	DC4	34	52	4	54	84	T	74	116	t
15	21	NAK	35	53	5	55	85	U	75	117	u
16	22	SYN	36	54	6	56	86	V	76	118	v
17	23	ETB	37	55	7	57	87	W	77	119	w

2020-03

hex	dec	ASCII	hex	dec	ASCII	hex	dec	ASCII	hex	dec	ASCII
18	24	CAN	38	56	8	58	88	X	78	120	x
19	25	EM	39	57	9	59	89	Y	79	121	y
1A	26	SUB	3A	58	:	5A	90	Z	7A	122	z
1B	27	ESC	3B	59	;	5B	91	[7B	123	{
1C	28	FS	3C	60	<	5C	92	\	7C	124	
1D	29	GS	3D	61	=	5D	93]	7D	125	}
1E	30	RS	3E	62	>	5E	94	^	7E	126	~
1F	31	US	3F	63	?	5F	95	_	7F	127	DEL

9.3

Detection range

The read/write head has a typical detection range of around 1 meter; this range is determined by the tag used and can be adjusted by selecting the transmission power. Other influencing factors include the setup and installation of the specific application, interference from any materials present (in particular metal), and the ambient conditions. The read and write distances for the relevant tag, which are detailed separately, have been established in a test laboratory under ideal conditions. For this reason, the combination of read/write head and tag must be tested for the intended application under real conditions.

Please note the distance tables. The distance tables and additional information regarding your product can be found at <http://www.pepperl-fuchs.com>. Simply enter the product name or model number in the **Search** box and then click the **Search** key.

The screenshot shows the top navigation bar of the Pepperl+Fuchs website. It includes the company logo and tagline 'Your automation, our passion.' on the right. The navigation menu contains links for 'Unternehmen', 'News+Events', 'Blog', 'Online-Portal', and 'Land wechseln'. Below this is a secondary menu with 'Produkte', 'Branchen', 'Service+Support', 'Kontakt', and 'Karriere'. On the right side of this menu is a shopping cart icon with '(0)', a headset icon, and a search bar with the placeholder text 'Ihr Suchbegriff' and a magnifying glass icon.

Select your product from the list of search results. Click on the information you require in the product information list, e.g., **Technical documents**.

The screenshot shows a horizontal tabbed interface for product information. The tabs are 'Datasheet', 'Documents' (which is currently selected and highlighted in green), 'CAD+CAE', 'Approvals+Certificates', and 'Associated Products'.


A list of all available documents is displayed.

Antenna Diagram

The antenna diagrams show the electric field strength in the far field depending on the direction. The front of the read/write head points towards 0°.

IUH-F190-V1-FR2* and IUT-F190-R4-V1-FR2*


Horizontal Cut¹

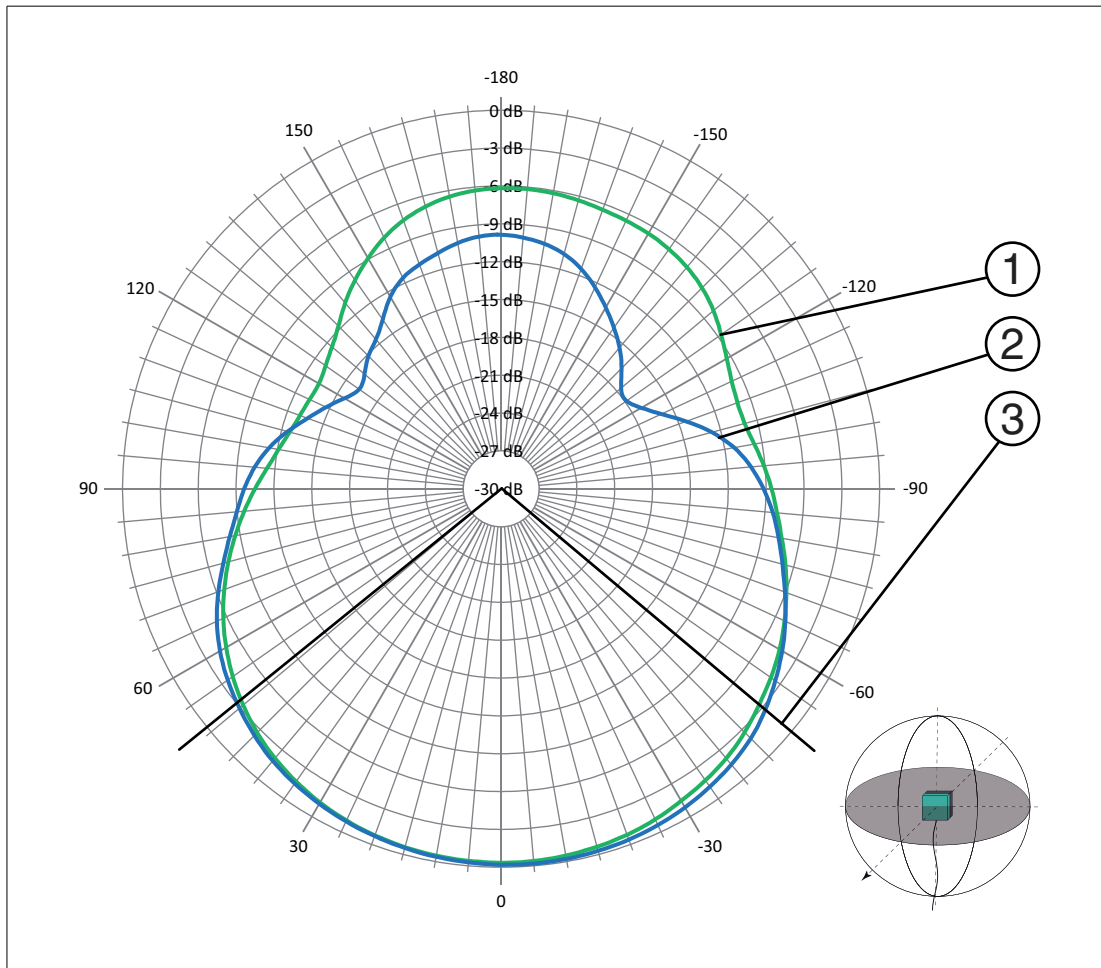

1. Read/write head points towards 0°

Figure 9.2

- ① - Horizontal polarization
- ② - Vertical polarization
- ③ - Full width at half maximum

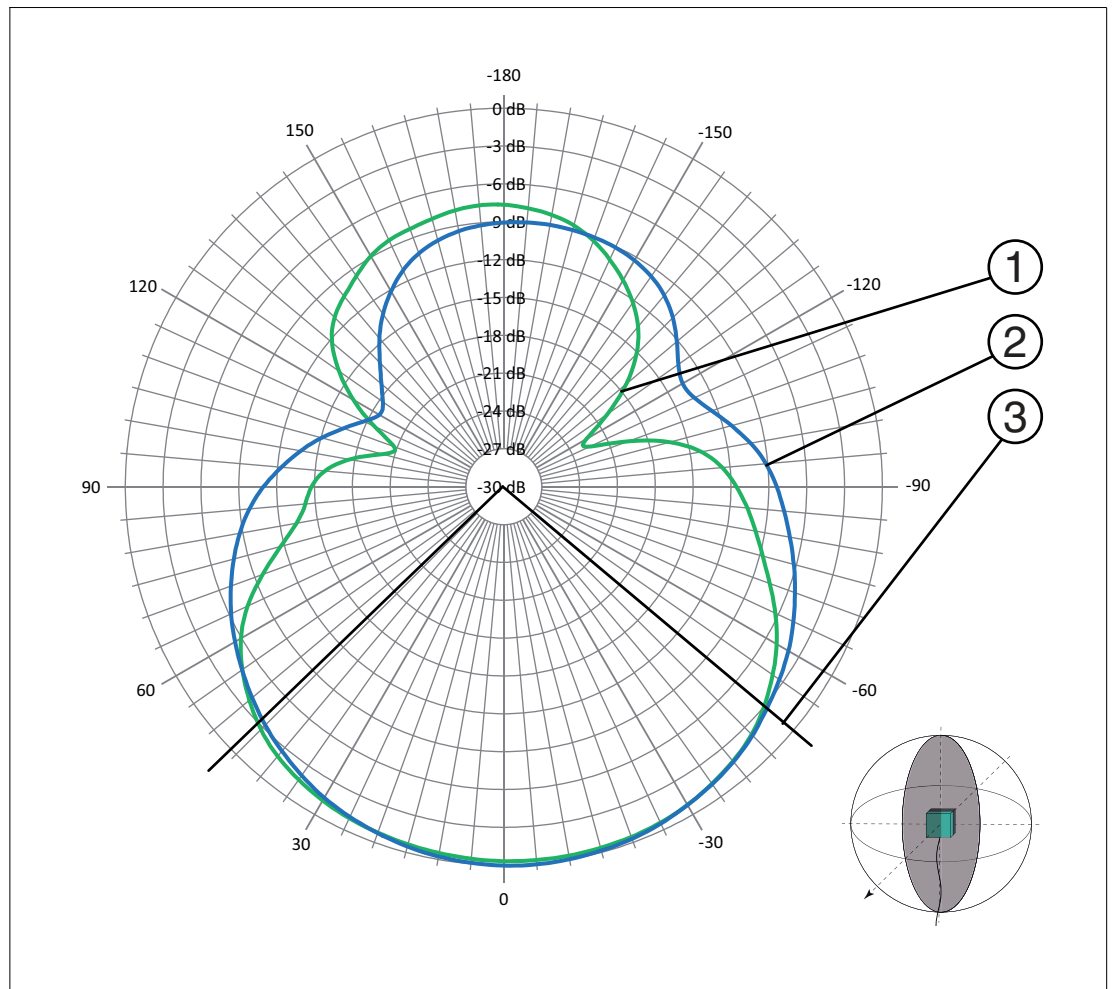Vertical Cut¹

1. Read/write head points towards 0°

Figure 9.3 (1) - Horizontal polarization
(2) - Vertical polarization
(3) - Full width at half maximum

Your automation, our passion.

Explosion Protection

- Intrinsic Safety Barriers
- Signal Conditioners
- FieldConnex® Fieldbus
- Remote I/O Systems
- Electrical Ex Equipment
- Purge and Pressurization
- Industrial HMI
- Mobile Computing and Communications
- HART Interface Solutions
- Surge Protection
- Wireless Solutions
- Level Measurement

Industrial Sensors

- Proximity Sensors
- Photoelectric Sensors
- Industrial Vision
- Ultrasonic Sensors
- Rotary Encoders
- Positioning Systems
- Inclination and Acceleration Sensors
- Fieldbus Modules
- AS-Interface
- Identification Systems
- Displays and Signal Processing
- Connectivity

Pepperl+Fuchs Quality

Download our latest policy here:

www.pepperl-fuchs.com/quality

